Service Manual

Elevator Valve EV100 & KV

Page	
3	EV ¾“ Cross Section Diagrams of Valve
4	EV 1½“ - 2“ Cross Section Diagrams of Valve
5+6	Quick Adjustment Procedure
7	Switches, Slow Down Distances
8	EV Trouble Shooting, Up Travel
9	EV Trouble Shooting, Down Travel
10	EV System Leakage
11	EV Spare Parts List
12	Down Levelling Adj. 9, Replacement
13	KV Cross Section Diagrams of Valve
14	KV Trouble Shooting, Up Travel
15	KV Trouble Shooting, Down Travel
16	KV System Leakage
17	KV Spare Parts List
18	KS Slack Rope Valve Purpose and Adjustment
19	Overheating of Power Units
20-29	CAD Drawings
30	Flow-Pressure-Tables (metric)
31	Flow-Pressure-Tables (USA)

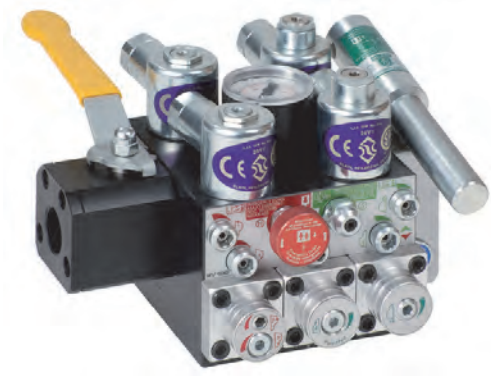

Pfaffenstrasse 1
Boellinger Hoefe
74078 Heilbronn
Germany

Tel. 07131 2821-0
Fax 07131 485216
http://www.blain.de
e-mail:info@blain.de

BLAIN HYDRAULICS GmbH

Manufacturer of the Highest Quality:
Control Valves for Elevators
Tank Heaters - Hand Pumps
Pipe Rupture Valves - Ball Valves

Printed in Germany January 2014

!

Caution

Only qualified elevator mechanics are permitted to install and adjust elevator control valves and controllers.

Every Blain control valve is subjected to strong quality standards, from production, adjustment and testing, to final shipment.

This manual will provide assistance whenever servicing is required. If necessary, please contact our technical department, stating the valve number, which is engraved into the EV casting above the nameplate, as well as other related technical data.

Technical Servicing

		(from USA)
Jochen Greiner:	Tel. +49 7131 282126 •	Tel. 01149 7131 282126
Dr. K. Ferhat Celik:	Tel. +49 7131 282139 •	Tel. 01149 7131 282126
Frank Pausder:	Tel. +49 7131 282132 •	Tel. 01149 7131 282126

Elevator Valve - EV 100 ¾”
for Home Lifts

EN ISO 9001

P Pump Port
T Tank Port
Z Cylinder Port

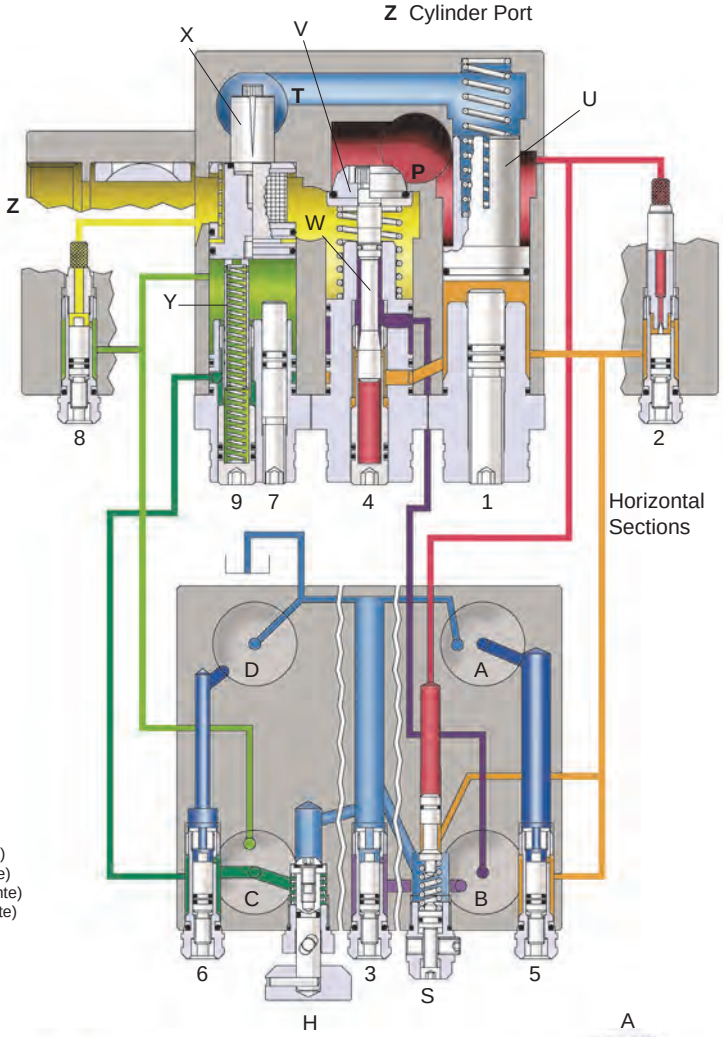

Control Elements
A Solenoid (UP Stop)
B Solenoid (UP Deceleration)
C Solenoid (Down Deceleration)
D Solenoid (Down Stop)
H Manual Lowering
S Relief Valve
U By Pass Valve
V Check Valve
W Leveling Valve (Up)
X Full Speed Valve (Down)
Y Leveling Valve (Down)

Adjustments UP
1 By Pass
2 Up Acceleration
3 Up Deceleration
4 Up Leveling Speed
5 Up Stop

Adjustments DOWN
6 Down Acceleration
7 Down Full Speed
8 Down Deceleration
9 Down Leveling Speed

Pressure
Pumpe
Bypass Valve
Up Leveling
Tank
Cylinder
Down Valve
Down Leveling

Steuerelemente
A Magnetventil (Halt oben)
B Magnetventil (Abbremsen auf)
C Magnetventil (Abbremsen unten)
D Magnetventil (Halt unten)
H Notablassventil
S Überdruckventil
U Umlaufkolben
V Rückschlagventil
W Schleichfahrtventil (auf)
X Senkkolben
Y Schleichfahrtventil (ab)

Einstellungen AUF
1 Umlaufeinstellung
2 Anfahrdrossel
3 Abbremsdrossel
4 Schleichfahrteinstellung
5 Haltedrossel

Einstellungen AB
6 Anfahrtdrossel
7 Senkfahrteinstellung
8 Abbremsdrossel
9 Schleichfahrteinstellung

Druck
Pumpe
Umlaufkolben
Schleichfahrt (Auf)
Tank
Zylinder
Senkkolben
Schleichfahrt (Ab)

Eléments de commande
A Electro-vanne ‘arrêt’ (en fin de montée)
B Electro-vanne ‘ralentissement’ (montée)
C Electro-vanne ‘ralentissement’ (descente)
D Electro-vanne ‘arrêt’ (en fin de descente)
H Descente de secour (homme mort)
S Valve de sécurité
U By-pass
V Clapet anti-retour
W Soupape montée petite vitesse
X Soupape descente
Y Soupape descente petite vitesse

Réglages MONTÉE
1 By-pass
2 Etrangleur de démarrage
3 Etrangleur de ralentissement
4 Réglage de petite vitesse
5 Etrangleur d’arrêt

Réglages DESCENTE
6 Etrangleur de démarrage
7 Réglage de grande vitesse
8 Etrangleur de ralentissement
9 Réglage de petite vitesse

Pression
Pompe
By-pass
Montée petit vitesse
Cuve
Vérin
Soupape descente
Descente petite vitesse

Elementos de mando
A Válv. magnética ‘parada’ (arriba)
B Válv. magnética ‘frenado’ (subida)
C Válv. magnética ‘frenado’ (bajada)
D Válv. magnética ‘parada’ (abajo)
H Válv. parada de urgencia (manual)
S Válv. de seguridad
U Válv. de desviación
V Válv. de retención
W Válv. de subida lentísima
X Válv. de bajada
Y Válv. de bajada lentísima

Ajustes SUBIDA
1 Desviación
2 Arranque
3 Frenado
4 Recorrido lentísimo
5 Parada

Ajustes BAJADA
6 Arranque
7 Recorrido en bajada
8 Frenado
9 Recorrido lentísimo

Presión
Bomba
Válvula de desviación
Subida lentísima
Tanque
Cylindro
Válvula de bajada
Bajada lentísima

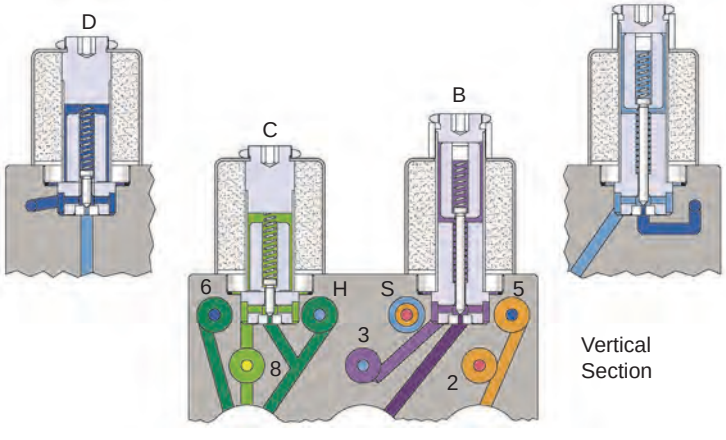

Vertical Section

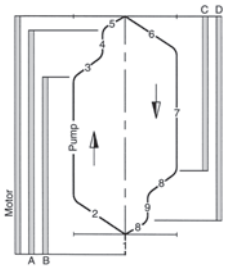

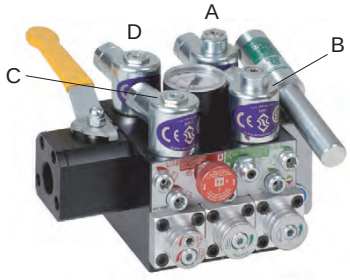

EN ISO 9001

Elevator Valve
EV 100 1½”, 2”, ½”

P Pump Port
T Tank Port
Z Cylinder Port

Control Elements
A Solenoid (UP Stop)
B Solenoid (UP Deceleration)
C Solenoid (Down Deceleration)
D Solenoid (Down Stop)
H Manual Lowering
S Relief Valve
U By Pass Valve
V Check Valve
W Leveling Valve (Up)
X Full Speed Valve (Down)
Y Leveling Valve (Down)

Adjustments UP
1 By Pass
2 Up Acceleration
3 Up Deceleration
4 Up Leveling Speed
5 Up Stop

Adjustments DOWN
6 Down Acceleration
7 Down Full Speed
8 Down Deceleration
9 Down Leveling Speed

Pressure
Pumpe
Bypass Valve
Up Leveling
Tank
Cylinder
Down Valve
Down Leveling

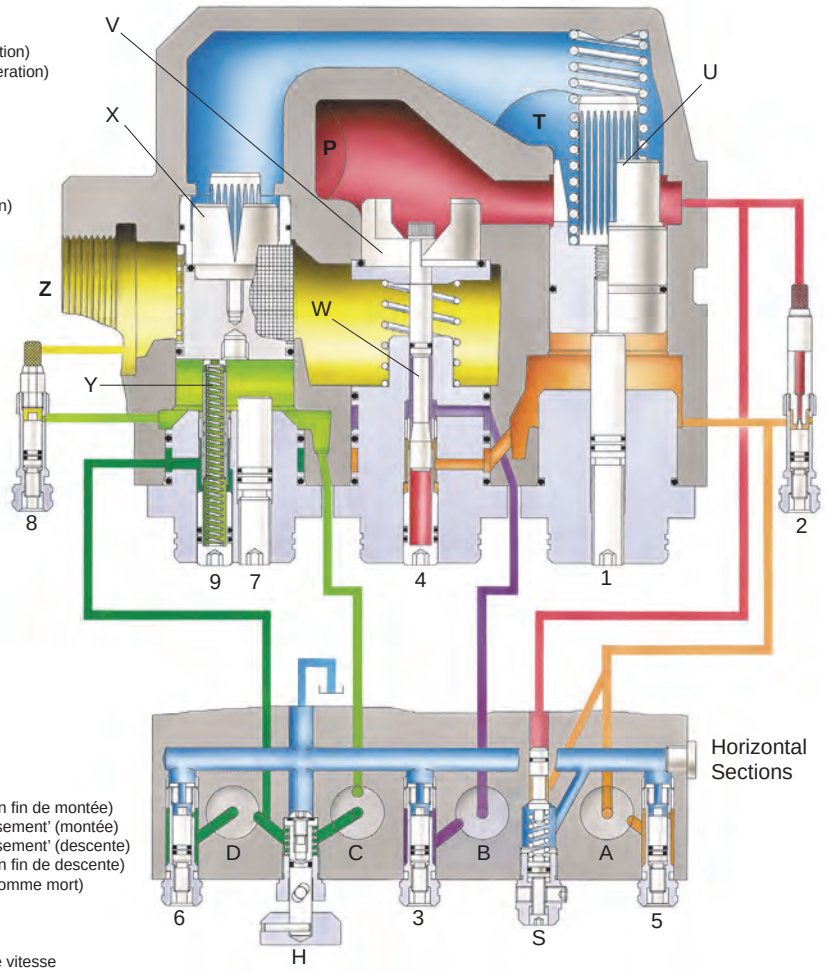

Horizontal Sections

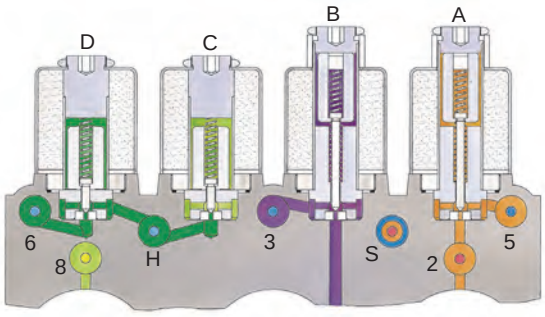

Vertical Section

Steuerelemente
A Magnetventil (Halt oben)
B Magnetventil (Abbremsen auf)
C Magnetventil (Abbremsen unten)
D Magnetventil (Halt unten)
H Notablassventil
S Überdruckventil
U Umlaufkolben
V Rückschlagventil
W Schleichfahrtventil (auf)
X Senkkolben
Y Schleichfahrtventil (ab)

Einstellungen AUF
1 Umlaufeinstellung
2 Anfahrdrossel
3 Abbremsdrossel
4 Schleichfahrteinstellung
5 Haltedrossel

Einstellungen AB
6 Anfahrtdrossel
7 Senkfahrteinstellung
8 Abbremsdrossel
9 Schleichfahrteinstellung

Druck
Pumpe
Umlaufkolben
Schleichfahrt (Auf)
Tank
Zylinder
Senkkolben
Schleichfahrt (Ab)

Eléments de commande
A Electro-vanne ‘arrêt’ (en fin de montée)
B Electro-vanne ‘ralentissement’ (montée)
C Electro-vanne ‘ralentissement’ (descente)
D Electro-vanne ‘arrêt’ (en fin de descente)
H Descente de secour (homme mort)
S Valve de sécurité
U By-pass
V Clapet anti-retour
W Soupape montée petite vitesse
X Soupape descente
Y Soupape descente petite vitesse

Réglages MONTÉE
1 By-pass
2 Etrangleur de démarrage
3 Etrangleur de ralentissement
4 Réglage de petite vitesse
5 Etrangleur d’arrêt

Réglages DESCENTE
6 Etrangleur de démarrage
7 Réglage de grande vitesse
8 Etrangleur de ralentissement
9 Réglage de petite vitesse

Pression
Pompe
By-pass
Montée petit vitesse
Cuve
Vérin
Soupape descente
Descente petite vitesse

Elementos de mando
A Válv. magnética ‘parada’ (arriba)
B Válv. magnética ‘frenado’ (subida)
C Válv. magnética ‘frenado’ (bajada)
D Válv. magnética ‘parada’ (abajo)
H Válv. parada de urgencia (manual)
S Válv. de seguridad
U Válv. de desviación
V Válv. de retención
W Válv. de subida lentísima
X Válv. de bajada
Y Válv. de bajada lentísima

Ajustes SUBIDA
1 Desviación
2 Arranque
3 Frenado
4 Recorrido lentísimo
5 Parada

Ajustes BAJADA
6 Arranque
7 Recorrido en bajada
8 Frenado
9 Recorrido lentísimo

Presión
Bomba
Válvula de desviación
Subida lentísima
Tanque
Cylindro
Válvula de bajada
Bajada lentísima

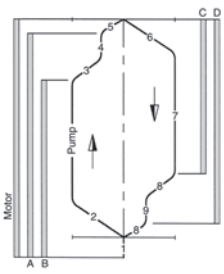

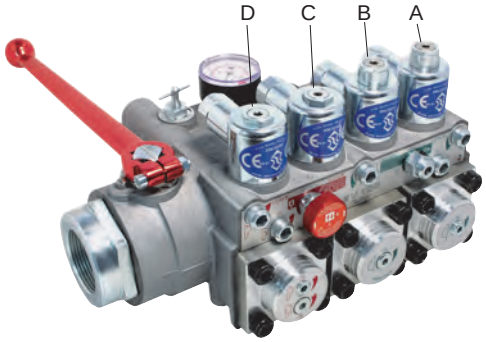

EN ISO 9001

Quick adjustment procedure

Solenoid Coils

During adjustment of the EV 100 valve, instead of making a full floor to floor travel to check operation, much time can be saved by removing the securing nuts of the coil and switching to deceleration or to acceleration by lifting or replacing the appropriate coil by hand, allowing several adjustment corrections during one car travel between floors.

Caution: Once removed from the solenoid tube, the energised coil will begin to overheat after about 20 secs.
If necessary, to slow the rate of heating, place an 8 or 10 mm socket key or similar steel rod as core thru the coil.
Do not lay an energised coil to one side, otherwise it may overheat unnoticed.

If the coil becomes too hot to hold, it must be replaced, back over the solenoid tube and any further adjustment carried out with the elevator making normal floor to floor runs.

Car not visible from Machineroom

If the car cannot be seen during adjustment of the valve, the acceleration and deceleration times can be heard from the change of the turbulent noise within the valve as the speed of the car changes. With no load in the car, the duration of the speed changes should be about 2,5 seconds. This applies to adjustments 2, 3, 6 and 8.

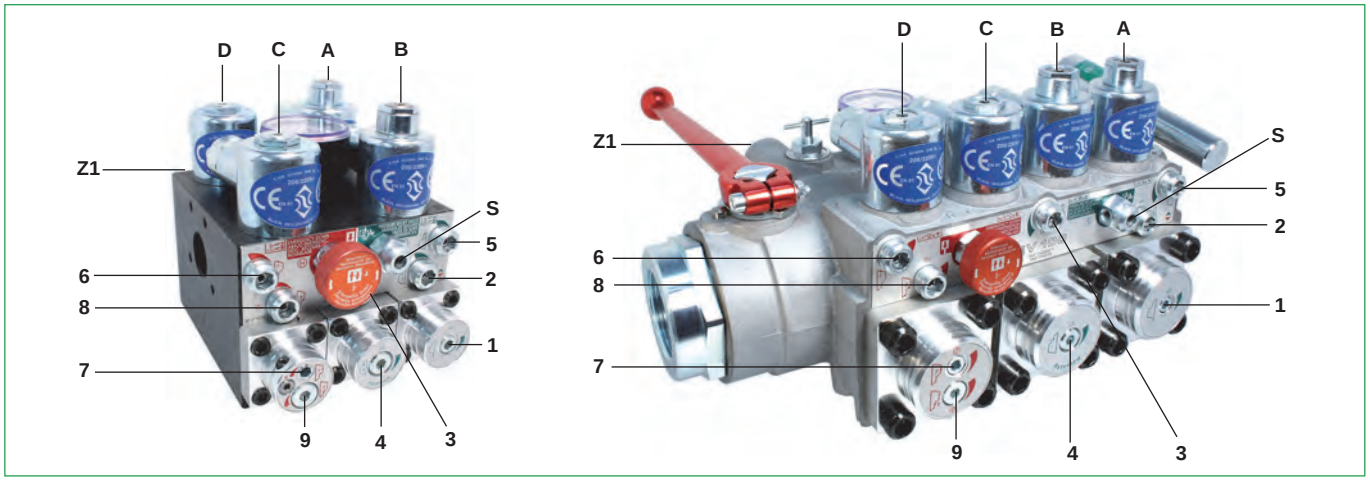

Up Travel (empty car)

PRE-SETTINGS		EV 100 ¾"	EV 100 1½" - EV 100 2½"	
Adjustment No. **1**	level with flange face			5 mm Socket key
Adjustment No. **2**	all the way 'in'	then 1,5 turns 'out'	then 2 turns 'out'	3 mm Socket key
Adjustment No. **4**	level with flange face			5 mm Socket key
Adjustment No. **3**	all the way 'in'	then 1,5 turns 'out'	then 2,5 turns 'out'	3 mm Socket key
Adjustment No. **5**	all the way 'in'	then 1,5 turns 'out'	then 2,5 turns 'out'	3 mm Socket key
Adjustment No. **S**	all the way 'in'	then 1,5 turns 'out'	then 1,5 turns 'out'	3 mm Socket key

1. Pilot Pressure Setting
Disconnect coil **A**. Energise Motor (pump).
If the car does not move, turn No. **1** 'in' until the car begins to move, turn No. **1** 'out' until the car stops, then back out again ½ turn. The car remains standing still.
DO NOT UP-LEVEL WITH THIS ADJUSTMENT! Between full and empty car, levelling speed differences would be extreme.

2. Up Acceleration
Reconnect coil **A**. Start Motor and energise coil **A** and **B** (normal 'up' call).
Observe the up acceleration. If it is too quick, turn No. **2** 'in' ½ turn. If it is too long, turn No. **2** 'out' ½ turn.
Repeat until acceleration is satisfactory. Acceleration time should be about 2,5 secs.

4. Up Levelling
Disconnect coil **B**. Energise Motor and coil **A** (normal 'up-level' call).
With adjustment No. **4** level with the face of the flange the car will up level. If the levelling speed is too fast, turn No. **4** 'in' until the speed is as required. If the speed is too slow, turn No. **4** 'out'. Recommended speed 6 cm/sec.

Quick adjustment procedure

3. Up Deceleration
With coil **B** still disconnected. Energise motor and coil **A** (normal 'up-level' call).
The car will travel upwards at levelling speed. Turn No. **3** 'in' until the car starts to up level faster, then turn No. **3** 'out' until the original levelling speed is observed. Reconnect coil **B** and place a normal up call.
Observe the deceleration of the car. If it is too long, turn No. **3** 'out' ¼ turn; if it is too short, turn No. **3** 'in' ¼ turn.
Repeat until deceleration is satisfactory. Deceleration time should be about 2,5 secs.

5. Up Soft Stop
Disconnect coil **A**. Energise Motor.
The car should not move. Turn No. **5** 'in' until the car starts upwards then turn No. **5** 'out' until the car stops.
Reconnect coil **A**. Energise Pump-Motor and **A**. The car will travel upwards at levelling speed.
Lift **A** coil by hand briefly and observe the stopping of the car. If the stop is too hard turn No. **5** 'in' ¼ turn.
If the stop is too soft, turn No. **5** 'out', ¼ turn. Repeat until the stop is satisfactory.

S Pressure Relief Valve
Turn **S** screw 'out' until about 2 mm of the screw head is showing. Close the ball valve in the cylinder line and open the manual lowering **H** to lower valve pressure down to zero. Place an up call, energising motor and coils **A** and **B**. The relief pressure will show on the pressure gauge.
To increase the relief valve setting, turn **S** 'in'.
To decrease the relief valve setting, turn **S** 'out', then open the manual lowering for ½ second with the pump still running to release locked-in pressure, before observing the pressure gauge reading.

PRE-SETTINGS				
Adjustment No. **8**	all the way 'in'	then 1 turns 'out'	then 1,5 turns 'out'	3 mm Socket key
Adjustment No. **6**	all the way 'in'	then 1,5 turns 'out'	then 1,5 turns 'out'	3 mm Socket key
Adjustment No. **7**	3 mm under the flange face			5 mm Socket key
Adjustment No. **9**	level with flange face			5 mm Socket key

8. Down Deceleration
Place down call (coils **C** and **D** energised).
As the car approaches full speed, remove coil **D** by hand briefly from the solenoid and observe the deceleration of the car.
If the deceleration is too long, turn No. **8** 'out' ¼ turn; if it is too short, turn No. **8** 'in' ¼ turn.
Repeat until deceleration is satisfactory. Deceleration time should be about 2,5 secs.

6. Down Acceleration
Turn No. **6** all the way 'in'. Place down call (coils **C** and **D** energised).
The car will not move. Turn No. **6** 'out' slowly until the car accelerates downwards.
If the acceleration is too long, turn No. **6** 'out' ¼ turn. If it is too short, turn No. **6** 'in' ¼ turn.
Acceleration time should be about 2,5 secs.

7. Down Full Speed
Place down call (coils **C** and **D** energised).
Observe full down speed. Turn No. **7** 'in' for slower, 'out' for faster speed.

9. Down Levelling Speed
Disconnect coil **C**. Place down call (**D** energised).
Observe down levelling speed. Turn No. **9** 'in' for slower, 'out' for a fast down levelling speed.
Recommended speed 6 cm/sec.

H Emergency Lowering
The manually operated emergency down speed and the **D** coil operated down levelling speed are the same.

Down Stop
When solenoid **D** is de-energised with solenoid **C** remaining de-energised, the car will stop according to the setting of adjustment 8 and no further adjustment will be required.

KS Slack Rope Valve
The KS is adjusted with a 3 mm Socket Key by turning the screw **K** 'in' for higher pressure and 'out' for lower pressure. With **K** turned all the way 'in', then half a turn back out, the unloaded car should descend when the **D** solenoid alone is energised. Should the car not descend, **K** must be backed off until the car just begins to descend, then backed off a further half turn to ensure that with cold oil, the car can be lowered as required.

EN ISO 9001

Switch Distances

Recommended distances between leveling and stop switches

Elevator Speed mtrs/sec.	Switch Distance approx. cm	Elevator Speed ft/min.	Switch Distance approx. inches
0,10	5	20	2
0,15	10	30	4
0,20	15	40	6
0,25	18	50	7
0,30	25	60	9
0,35	30	70	12
0,40	40	80	16
0,45	46	90	18
0,50	50	100	20
0,55	58	110	23
0,60	70	120	28
0,70	80	140	31
0,80	95	160	36
0,90	105	180	41
1,00	120	200	48

With no load in the car, the deceleration time should be 2 to 2,5 secs. from full speed to levelling speed.
The levelling time should be 1 to 2 secs.

Accurate landing can be affected by different factors as follows:

a. If the levelling speed is fast i.e. 0,1 m/sec (20 ft/min), landing will not be as accurate as when the levelling speed is slower i.e. 0,05 m/sec (10 ft/min).

b. If the soft stop adjustment ‘5’ is set too soft, stopping will be less accurate as when ‘5’ is set for a quicker stop.

c. Particularly when the mechanic can not see the operation of the elevator car, it is possible that the elevator has not finished decelerating from fast speed before reaching the floor. In other words, the elevator has not slowed down to its correct levelling speed before the stop switch is actuated.
Usually, the levelling operation can be observed through the crack in the car doors. Alternatively, in the machine room, the turbulent noise within the valve during levelling can be heard and should last 1 to 2 secs. following 2 to 2,5 secs. deceleration time with no load in the car.

d. A difference in landing accuracy between the elevator being loaded and unloaded, can be due to the car under load, leaning to one side by several millimeters causing an alteration in the operating position of the stop switch by some centimetres.

EV 100 Trouble Shooting (2013)

UP Travel

Problem	Possible cause	Recommended
No Up-Start (Elevator remains at floor)	Test: Turn adjustment **5** all the way in. If the elevator now starts upwards the problem is at solenoid **A**.	
	Solenoid **A:** not energised or voltage too low.	See Ⓐ below.
	Solenoid **A:** tube not screwed down tight.	Tighten Solenoid **A** tube.
	Solenoid **A:** Dirt or damage between needle **AN** and seat **AS**.	Clean or change needle and seat.
	Adjustment **2** not far enough open.	Turn out adjustment **2**.
	Adjustment **1** too far back (open). Not enough pilot pressure.	Turn in adjustment **1** with the pump running.
	Pressure relief valve **S** is set too low.	Set relief valve higher. (turn in)
	Adjustment **8** turned in too far (car sits on the buffer).	Turn out adjustment **8**.
	Bypass flow guide **U** is too large.	Insert smaller bypass flow guide (see flow guide charts at EV catalogue).
	Pump running in the wrong direction.	Check motor direction and install the pump correctly.
	The pump connection flange is leaking excessively.	Seal the pump connection.
	The pump is undersize, worn or crack in the housing.	Select bigger pump or replace pump.
	Test: If by turning adjustment **1** with the pump running the pressure does not rise above 5 bar, even with a smaller bypass valve inserted, the problem should be sought at the pump.	
Up-Start, but no Full Speed	Test: Turn adjustment **3** all the way in. If the elevator now travels upwards at full speed the problem is at solenoid **B**.	
	Solenoid **B** not energised or voltage too low.	See Ⓐ below.
	Solenoid **B** tube not screwed down tight.	Tighten Solenoid **B** tube.
	Solenoid **B**: Dirt or damage between needle **AN** and seat **AS**.	Clean or change needle and seat.
	The pump connection flange is leaking excessively.	Seal the pump connection.
	The pump is undersize or worn.	Select bigger pump or replace pump.
Up-Start too hard	Adjustment **1** turned in too far.	Turn out adjustment **1**.
	Adjustment **2** turned out too far.	Turn in adjustment **2**.
	Bypass flow guide U too small (slots too narrow).	Change to flow guide with wider slots.
	O-Ring **UO** on Bypass Valve **U** is leaking.	Change O-Ring → see EV Spare Parts List.
	Star to Delta motor switch period is too long.	0.2-0.3 sec. is sufficient.
	Excessive friction on the guide rails or in the cylinder head.	Can not be eliminated thru valve adjustment.
No deceleration into levelling speed	Solenoid **B** does not de-energise.	Lift coil to check magnetic pull. See Ⓐ below. Slow down switch possibly set to high (late).
	Adjustment **3** turned in too far.	Turn out adjustment **3**. Turn in adjustment **2**.
	O-Ring **UO** on Bypass Valve **U** is leaking.	Change O-Ring → see EV Spare Parts List.
Levelling too fast	Adjustment 4 too far screwed out.	Turn in adjustment **4** to about 0.05 m/s levelling speed.
Deceleration into levelling speed but overtravel of floor level	Solenoid **A** is de-energised too late.	Lift coil to check pull. See Ⓐ below. Switch position in the shaft.
	Adjustment **5** turned in too far.	Turn out adjustment **5**.
	Adjustment **1** turned in too far.	Turn out adjustment **1**.
	Up levelling speed too high.	Turn in adjustment **4** to about 0.05 m/s levelling speed.
Bypass-pressure not adjustable	Restriction on the return line.	Remove restriction; enlarge return line.
	Bypass flow guide **U** too small (slots too narrow).	Change to flow guide with wider slots.
Elevator stops before reaching the floor (no levelling)	Solenoid **A** and **B** reversed.	Swap solenoid A and B. See Ⓐ below.
	Up levelling speed too slow.	Turn out adjustment **4.**
	Middle O-Ring **FO** of flange **4F** is leaking.	Change O-Ring → see EV Spare Parts List.
	Relief valve is set too low.	Set relief valve higher.

Valves are already adjusted and tested. Check electrical operation before changing valve settings. Test that the correct solenoid is energised, by removing nut and raising solenoid slightly to feel pull.

Ⓐ For checking the operation of the solenoids, remove the top nuts. By lifting the coils a few millimeters, the magnetic pull of the coil can be felt. For testing, the operation of the elevator car can also be controlled by lifting and replacing the coil.

If the coil gets too hot, the coil has to be mounted onto the solenoid and the following adjustments have to be carried out on normal travels from floor to floor.

Standard settings: Adjustments **1** & **4** approx. level with flange faces. Up to two turns in either direction may then be necessary. Adjustments **2, 3** & **5** all the way in (clockwise) then for EV ¾": all adjustments 1.5 turns out (c-clockwise), for EV 1 ½ " – 2 ½": adjustments **3** & **5** two and half turns out (c-clockwise), adjustment **2** two turns out. Small final adjustments may be necessary.

EV 100 Trouble Shooting (2013)

DOWN Travel

EN ISO 9001

Problem	Possible cause	Recommended
No Down Start	Solenoid **D** not energised or voltage too low.	Lift coil to check magnetic pull. See Ⓐ below.
	Adjustment **6** turned in too far.	Turn out adjustment **6**.
	Adjustment **8** turned out too far.	Turn in adjustment **8** cautiously. **Attention:** Danger of travelling through.
	O-Ring **UO** on Down Valve **X** is leaking.	Change O-Ring → see EV Spare Parts List.
No full speed	Solenoid **C** not energised or voltage too low.	Lift coil to check magnetic pull. See Ⓐ below.
	Adjustment **7** turned in too far.	Turn out adjustment **7**.
	Down Valve flow guide **X** too small.	Check insert size (see flow guide charts page 6)
No down levelling. Elevator stops before floor level	Solenoid **C** and **D** reversed.	Lift coil to check magnetic pull. See Ⓐ below.
	Solenoid **D** not energised or voltage too low.	See Ⓐ below.
	Adjustment **9** turned in too far.	Turn out adjustment **9** to about 0.05 m/s levelling speed.
	Spring **9F** in adjustment **9** is broken.	Replace adjustment **9** complete.
No down levelling. Elevator travels though floor level	Adjustment **8** turned in too far. Filter of adjustment 8 blocked or adjustment 8 is damaged.	Turn out adjustment **8** about ½ turn, clean the filter or replace adjustment 8.
	Adjustment **9** turned out too far.	Turn in adjustment **9** to about 0.05 m/s levelling speed.
	Solenoid valve **C:** Dirt or damage between needle **DN** and seat **DS**.	Clean or change needle and seat.
	Inner O-Ring **FO** on flange **7F** is leaking.	Change O-Ring → see EV Spare Parts List.
Elevator sinks quickly (only full speed)	Solenoid **D** tube not screwed down tight.	Tighten Solenoid **D** tube.
	Adjustment **8** turned in too far.	Turn out adjustment **8** about ½ turn.
	Solenoid **C** by pollution no functional.	Clean or change.
	Adjustment **9** by pollution no functional.	
Elevator sinks slowly due to inner leakage (Relevelling)	For possible down leakage points, see technical documentation "System Leakage".	Replace one seal at a time and test before proceeding to the next point of possible leakage, if still necessary.
	Solenoid valve **D:** Dirt or damage between needle **DN** and seat **DS**.	Clean or change needle and seat.
	O-Ring **XO** of Down Valve **X** is leaking.	Change O-Ring → see EV Spare Parts List. When Down Valve is compensated, replace Down Valve.
	O-Ring **VO** of Check Valve **V** is leaking.	Change Check Valve → see EV Spare Parts List.
	O-Ring **WO** of Check Valve **V** is leaking.	Change O-Ring → see EV Spare Parts List.
	Inner O-Ring **FO** on flange **4F** is leaking.	Change O-Ring → see EV Spare Parts List.
	O-Ring **HO** of Manual Lowering **H** is leaking.	Replace Manual Lowering.
Elevator sinks due to inner leakage of auxiliary equipment	**HP**: Handpump is leaking.	Remove suction tube and observe if handpump leaks. Replace complete hand pump.
	HX/MX: Adjustment **8M** turned in too far.	Turn out adjustment **8M**.
	HX/MX: Down valve **9M** is leaking. Dirt or damage between the needle **DN** and seat **DS**.	Clean or change needle and seat.
	HX/MX: O-Ring **XO** of Down Valve **YM** is leaking.	Change O-Ring → see EV Spare Parts List.
	HX/MX: Manual Lowering is leaking (HX/MX).	Replace Manual Lowering.
	Contraction of oil during cooling especially from 35°C or above.	Consider oil cooler if hot oil is a problem.

Valves are already adjusted and tested. Check electrical operation before changing valve settings. Test that the correct solenoid is energised, by removing nut and raising solenoid slightly to feel pull.

Ⓐ For checking the operation of the solenoids, remove the top nuts. By lifting the coils a few millimeters, the magnetic pull of the coil can be felt. For testing, the operation of the elevator car can also be controlled by lifting and replacing the coil.

If the coil gets too hot, the coil has to be mounted onto the solenoid and the following adjustments have to be carried out on normal travels from floor to floor.

Standard settings: Adjustments **7** & **9** approx. level with flange faces. Up to two turns in either direction may then be necessary. Adjustments **6** & **8** all the way in (clockwise) then for EV ¾", adjustment **6**,1 ½ turn and adjustment **8**, 1 turn out (c-clockwise), for EV 1 ½ " – 2 ½", adjustments **6** & **8**, 1 ½ turns out (c-clockwise). Small final adjustments may be necessary.

EN ISO 9001

EV System Leakage
(re-levelling)

Solenoid Valves

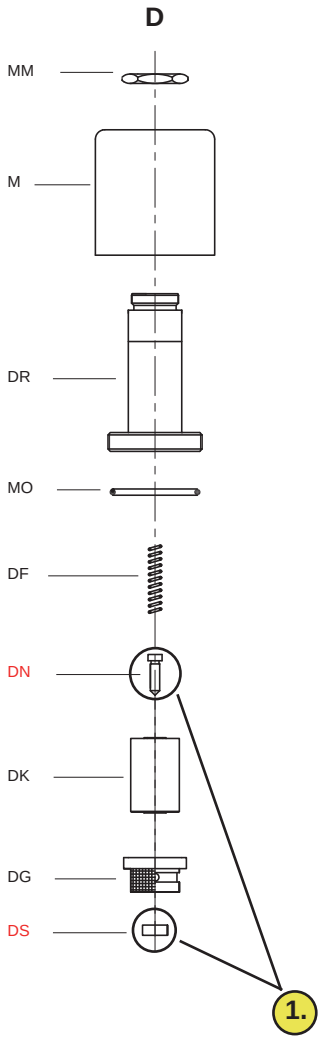

0-Ring-Size			
No.	**¾"**	**1 ½"**	**2½"**
FO	26x2P	47x2.5P	58x3P *
EO	9x2P	9x2P	9x2P
UO	26x2V	39.34x2.62V	58x3V
WO	5.28x1.78V	5.28x1.78V	5.28x1.78V
VO	23x2,5V	42x3V	60x3V **
7O	5.28x1.78P	9x2P	9x2P
XO	13x2V	30x3V	47x3V
HO	5.28x1.78V	5.28x1.78V	5.28x1.78V
SO	5.28x1.78P	5.28x1.78P	5.28x1.78P
MO	26x2P	26x2P	26x2P
*	FO by 4F 2½" is 67x2.5P		
**	90 Shore		
	O-Ring: V=FKM-Viton P=NBR-Perbunan		

Adjustments

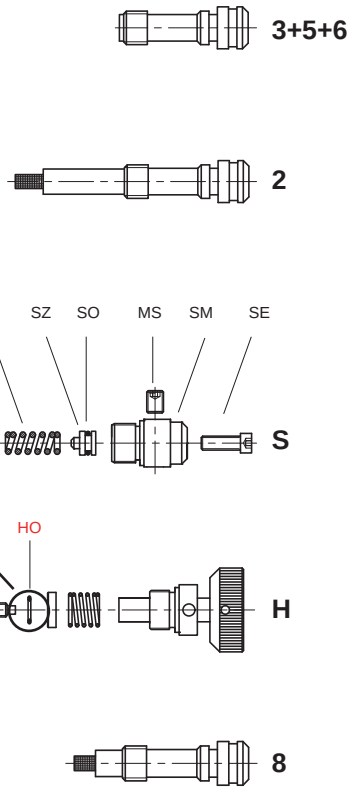

Replace possible leaking parts (DS & DN, XO, VO & WO, FO and HO) in the order of probabilities 1 - 5.
Replace part 1 and check if the valve is leakproof now.
Replace part 2 only if the valve is still leaking, etc.

Flow Valves

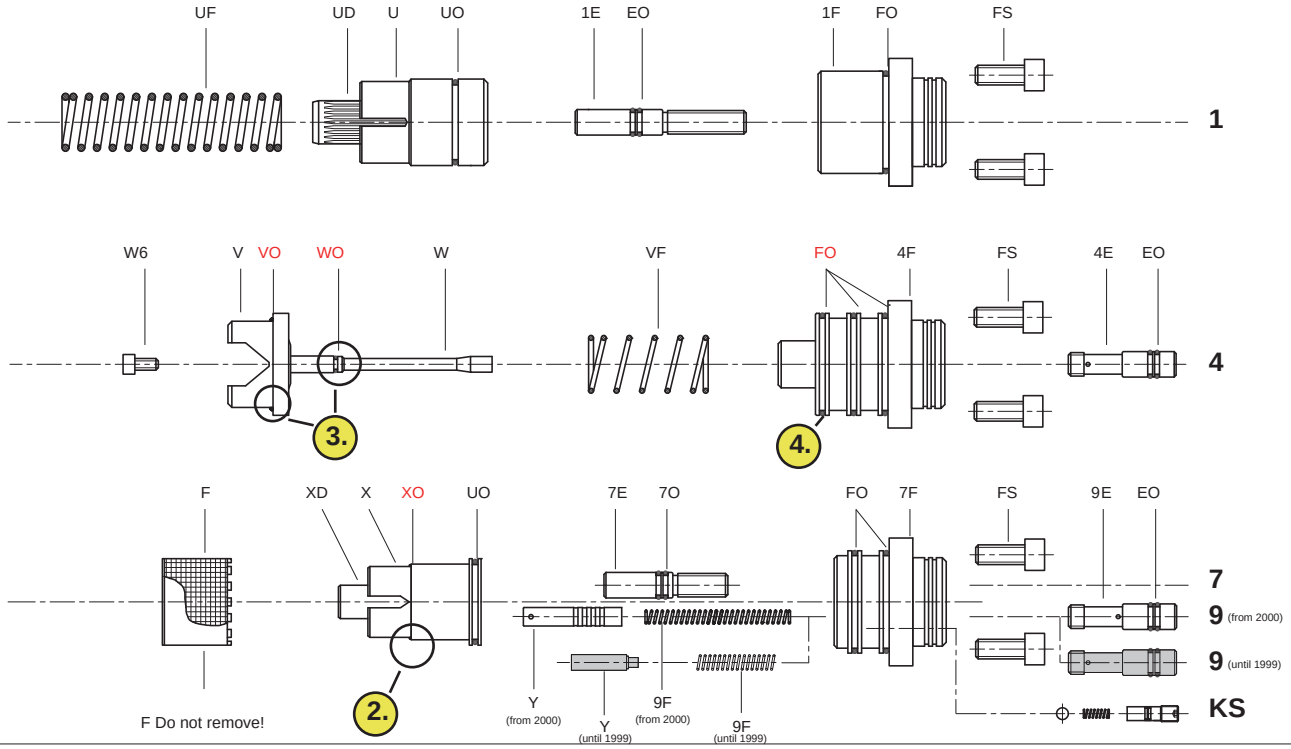

EV Spare Parts List

EN ISO 9001

Pos.	No.	Item
1	FS	Lock Screw - Flange
	FO	O-Ring - Flange
	1F	Flange - By Pass
	EO	0-Ring - Adjustment
	1E	Adjustment - By Pass
	UO	0-Ring - By Pass Valve
	U	By Pass Valve
	UD	Noise Suppressor
	UF	Spring - By Pass
2	2	Adjustment - Up Acceleration
3	3	Adjustment - Up Deceleration
4	EO	0-Ring - Adjustment
	4E	Adjustment - Up Levelling
	4F	Flange - Check Valve
	FO	0-Ring - Flange
	VF	Spring - Check Valve
	W	Up-Levelling Valve
	WO	0-Ring - Up Levelling Valve
	VO	Seal - Check Valve
	V	Check Valve
	W6	Screw - Check Valve
5	3	Adjustment - Up Stop
6	3	Adjustment - Down Acceleration
7	7F	Flange - Down Valve
	FO	0-Ring - Flange
	7O	0-Ring - Adjustment
	7E	Adjustment - Down Valve
	UO	0-Ring - Down Valve
	XO	Seal - Down Valve
	X	Down Valve
	XD	Noise Suppressor
	F	Main Filter
8	8	Adjustment - Down Deceleration
9	9E	Adjustment - Down Levelling
	EO	0-Ring - Adjustment
	9F	Spring - Down Valve
	Y	Down Levelling Valve
H	H	Manual Lowering - Self Closing
	HO	Seal - Manual Lowering
S	SE	Adjustment - Screw
	SM	Hexagonal
	MS	Grub Screw
	SO	0-Ring - Nipple
	SZ	Nipple
	SF	Spring
	SK	Piston
A+B	MM	Nut - Solenoid
	AD	Collar - Solenoid
	M	Coil - Solenoid (indicate voltage)
	AR	Tube - Solenoid 'Up'
	MO	0-Ring - Solenoid
	AN	Needle - 'Up'
	AF	Spring - Solenoid 'Up'
	AH	Seat Housing - 'Up'
	AS	Seat - Solenoid Up'
C+D	MM	Nut - Solenoid
	M	Coil - Solenoid (indicate voltage)
	DR	Tube - Solenoid 'Down'
	MO	0-Ring - Solenoid
	DF	Spring - Solenoid 'Down'
	DN	Needle - 'Down'
	DK	Core - Solenoid
	DG	Seat Housing with Screen-'Down'
	FD	Filter Solenoid
	DS	Seat - Solenoid 'Down'

Some parts occur more than once in different positions of the valve.

0-Ring-Size

No.	¾"	1 ½"	2 ½"
FO	26x2P	47x2.5P	58x3P *
EO	9x2P	9x2P	9x2P
UO	26x2V	39.34x2.62V	58x3V
WO	5.28x1.78V	5.28x1.78V	5.28x1.78V
VO	23x2,5V	42x3V	60x3V **
7O	5.28x1.78P	9x2P	9x2P
XO	13x2V	30x3V	47x3V
HO	5.28x1.78V	5.28x1.78V	5.28x1.78V
SO	5.28x1.78P	5.28x1.78P	5.28x1.78P
MO	26x2P	26x2P	26x2P

* FO by 4F 2½" is 67x2.5P
** 90 Shore

O-Ring: V=FKM-Viton
P=NBR-Perbunan

Solenoid Valves

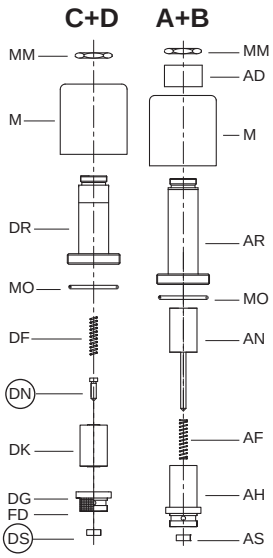

Adjustments

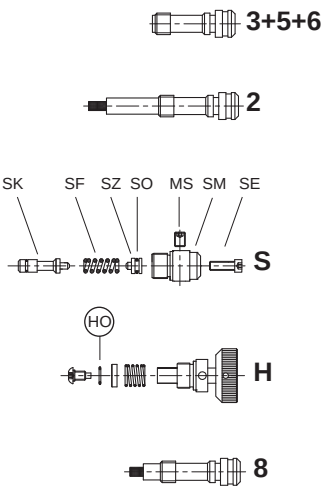

Flow Valves

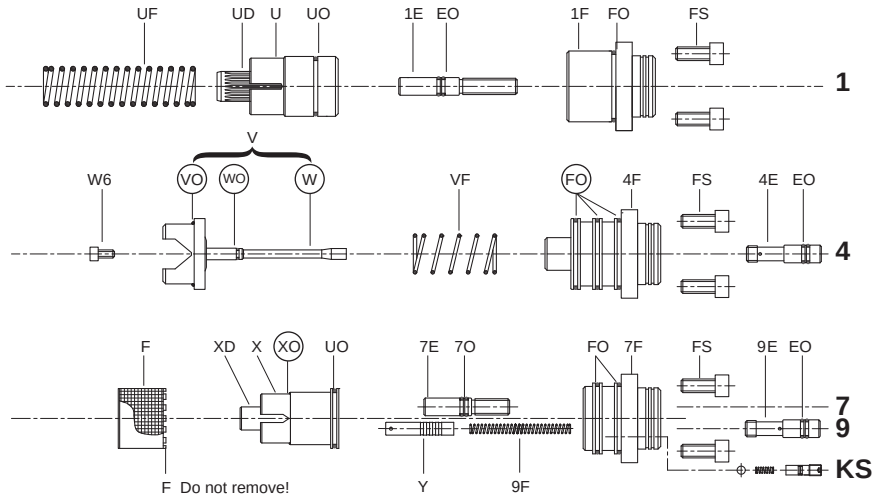

In case of down leakage, replace and test in the following order: (DS) & (DN), (XO), (VO), (WO), (FO) + (HO).

Taper threads: Do not exceed 8 turns of piping into the valve connections.

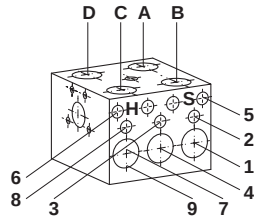

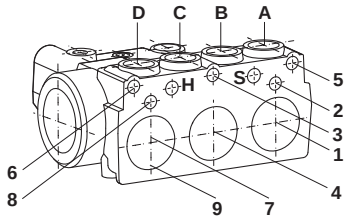

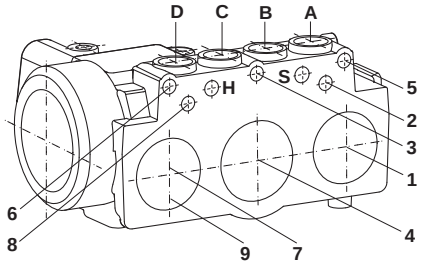

To order E 100 state m ow em t ar ress re or ow ide si e and solenoid olta e.
Exam le order E 100 380l m 18 bar em 110 AC 4 E 100 4 110AC

EN ISO 9001

Down Levelling Adjustment 9 Replacement

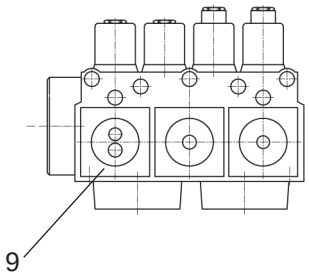

Old Type

1971 - 1999
Replacement not necessary
if operation is normal

New Type

from Jan. 2000

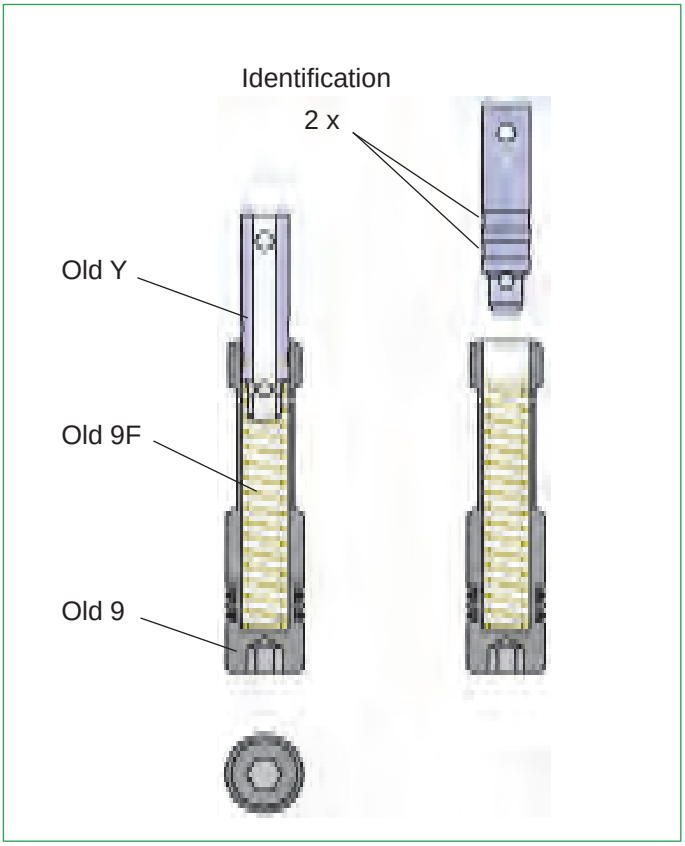

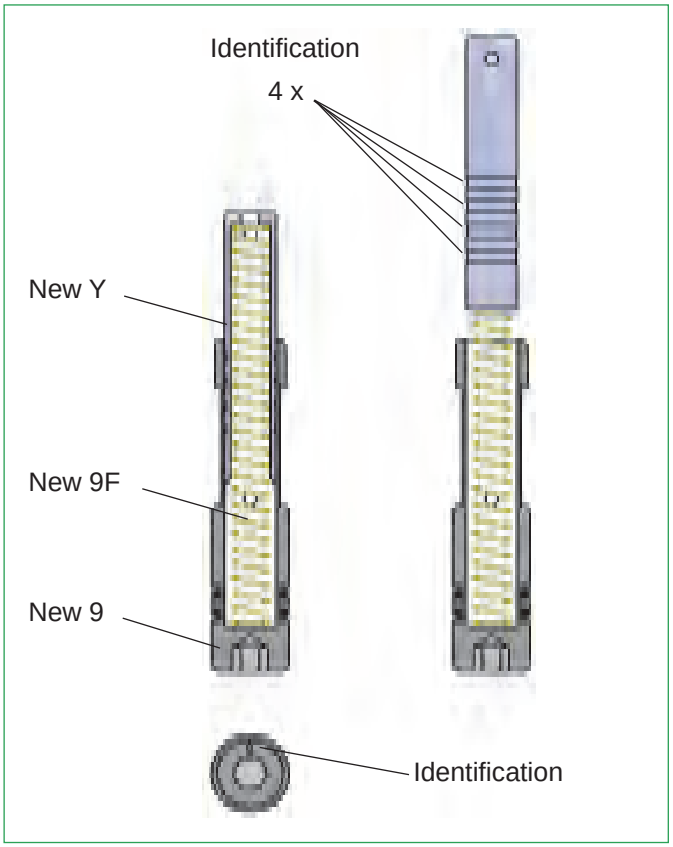

Advantages of new type

- Smoother deceleration
- Higher mechanical closing force
- Longer spring life
- Easier assembly

In the past, a small number of the original springs No. 9F have broken. Beginning January 2000, the design of the down levelling adjustment was modified to take a stronger spring.
The complete new adjustment is interchangeable with the original adjustment 9.
A broken spring 9 would cause the down levelling speed to be slower. No danger to passengers would arise as a consequence.

Residential Elevator Valves KV

EN ISO 9001

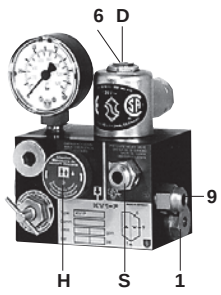

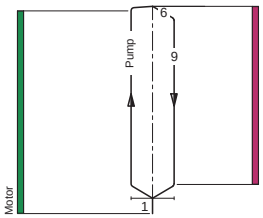

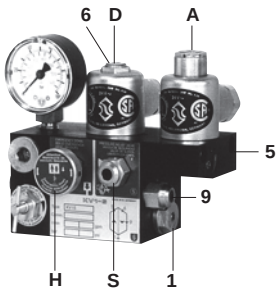

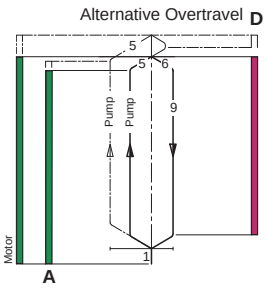

Control Elements

- **A** Solenoid Up
- **D** Solenoid Down
- **F** Main Filter
- **H** Manual Lowering
- **L** Gauge Shut Off Cock
- **U** Bypass Valve
- **V** Check Valve
- **Y** Down Levelling Valve

Adjustments

- **1** Bypass
- **5** Up Soft Stop
- **6** Down Acceleration
- **9** Down Speed
- **S** Relief Valve

Connections

- **P** Pump
- **T** Tank
- **Z** Cylinder

Options

- **BV** Ball Valve
- **HP** Hand Pump
- **KS** Slack Rope Valve
- **DH** High Pressure Switch
- **DL** Low Pressure Switch
- **RS** Pipe Rupture Valve
- **ES** Pipe Rupture Valve Switch

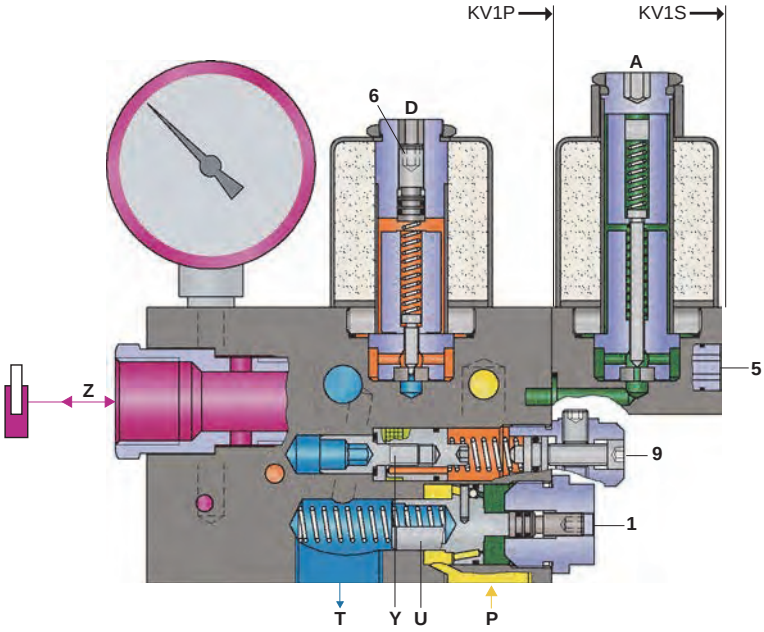

Pressures

- Pump
- Pilot Up
- Tank
- Cylinder
- Pilot Down

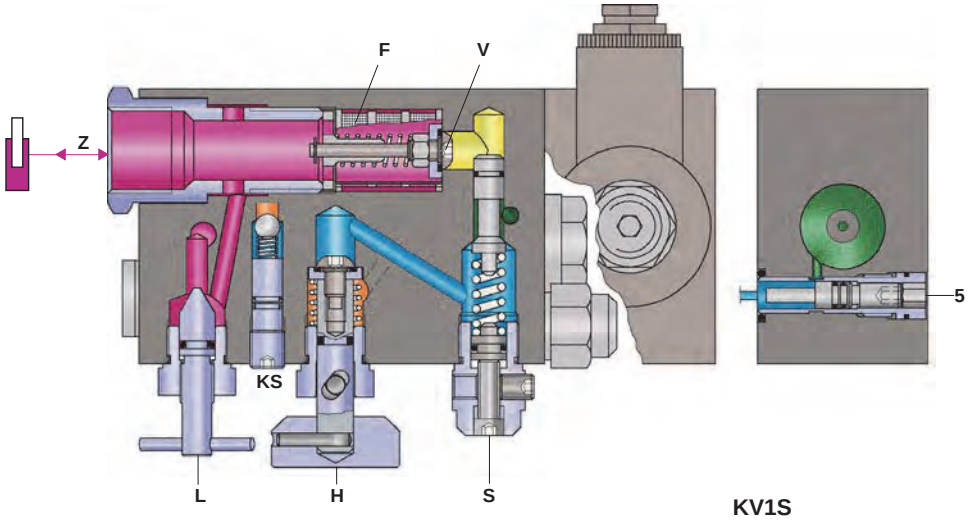

KV1P

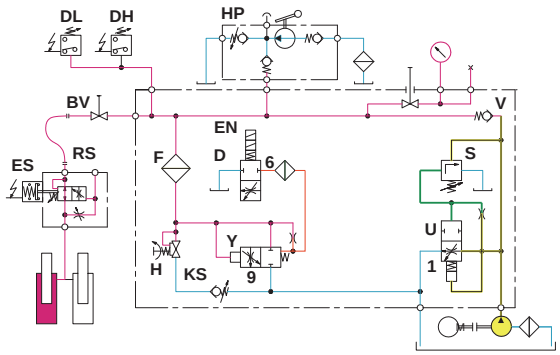

KV1S

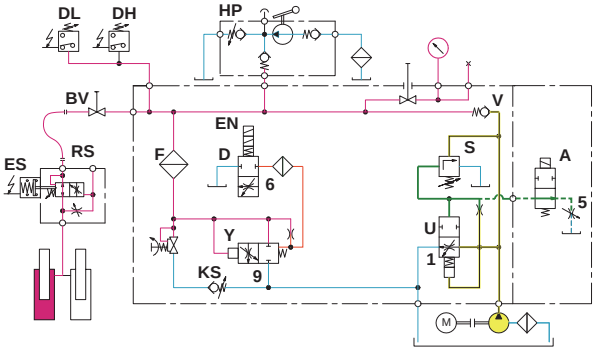

KV Elevator Control Valve Trouble Shooting (2013)

UP Travel

Problem	Possible cause	Recommended
No Up-Start (Elevator remains at floor).	Test for KV1S and KV2S: Turn adjustment **5** all the way in, if the elevator now starts upwards the problem is at solenoid **A**.	
	Solenoid **A** not energised or voltage too low.	See Ⓐ below.
	Solenoid **A** tube not screwed down tight.	Tighten Solenoid **A** tube.
	Solenoid valve **A:** Dirt or damage between needle and seat.	Clean or change needle and seat.
	Orifice in bypass valve blocked.	Clean or change bypass valve **U**.
	Adjustment **1** too far back (open). Not enough pilot pressure (minimum 5 bar) or bypass flow guide too large (slots too wide). see*	With the pump running, turn adjustment **1** in, or if already too far in, insert smaller bypass flow guide (see the diagramm in KV literature).
	Pressure relief valve **S** is set too low.	Set relief valve higher. Preadjustment all the way in and then 1½ turn out.
	Down valve **7** or **9** are open due to contamination in their orifices. (Especially if the elevator settles back on the buffers. Solenoid **D** is leaking.	Clean or replace down valves **7** (KV2 only) and **9**. Clean solenoid **D**.
	Pump running in the wrong direction.	Check motor direction and install the pump correctly.
	The pump connection flange is leaking excessively.	Seal the pump connection.
	The pump is undersize, worn or crack in the housing.	Select a bigger pump or replace the pump.
	* Test: If by turning adjustment **1** with the pump running the pressure does not rise above 5 bar, even with a smaller bypass valve inserted, the problem should be sought at the pump.	
Up-Start too hard.	Adjustment **1** turned in too far.	Turn out adjustment **1**.
	Bypass flow guide **U** too small (slots too narrow).	Change to flow guide with wider slots.
	Star to delta motor switch period is too long.	0.2-0.3 sec. is sufficient.
	O-ring **UO** on the bypass valve **U** is leaking.	Change O-Ring → see KV Spare Parts List.
	Excessive friction on the guide rails or in the cylinder head.	Can not be eliminated through valve adjustment.
Elevator slows down but over travels the floor level.	Solenoid **A** (Up-stop) is de-energised too late.	See Ⓐ below.
	Adjustment **5** (Soft Stop) not far enough open (KV1S and KV2S).	Open further out.
	Adjustment **1** Bypass not far enough open and pump flow does not completely by-pass.	Open adjustment **1** two turns further out.
Relief-Valve not adjustable to lower value.	Adjustment **1** too far in.	Open adjustment **1** further out.
	½“ pipe thread connection in return line **T** should not exceed 14 mm.	With tape threads, 4-6 threads of engagement is sufficient.
Elevator doesn‘t reach full speed.	By-pass piston doesn‘t close. Dirt/foreign particeles in by-pass piston orifice.	Clean the dirt / foreign particels in the by-pass piston orifice or change the piston and turn adjustment **1** out.

Valves are already adjusted and tested. Check electrical operation before changing valve settings. Test that the correct solenoid is energised, by removing nut and raising solenoid slightly to feel pull.

Ⓐ For checking the operation of the solenoids, remove the top nuts. By lifting the coils a few millimeters, the magnetic pull of the coil can be felt. For testing, the operation of the elevator car can also be controlled by lifting and replacing the coil.

If the coil gets too hot, the coil has to be mounted onto the solenoid and the following adjustments have to be carried out on normal travels from floor to floor.

Standard settings: Adjustment **1** level with flange faces. Adjustment **5** (KV1S & KV2S) level with flange faces.

EN ISO 9001

KV Elevator Control Valve Trouble Shooting (2013)

Down Travel

Problem	Possible cause	Recommended
No Down Start (Elevator remains at floor).	Solenoid **D** not energised or voltage too low.	Lift coil to check magnetic pull. See Ⓐ below.
	Adjustment **6** turned in too far.	Turn out adjustment **6**.
	O-ring **XO** on down valve, leaking.	Replace O-ring **XO**.
KV2 only: Down start but no full speed	Solenoid **C** not energised or voltage too low.	Lift coil to check magnetic pull. See Ⓐ below.
	Adjustment **7** (Full speed down) turned in too far.	Turn out adjustment **7**.
KV2 only: Down full speed but no down leveling.	Solenoids **C** and **D** reversed.	See Ⓐ below. Swap solenoid **C** and **D**.
	Adjustment **9** (Down leveling speed) turned in too far.	Turn out adjustment **9**.
Elevator travels through the floor level.	Down flow guide too small (slots too narrow).	Change flow guide (use next bigger insert size).
	Down leveling speed **9** too fast.	Adjust to 0.05 m/s.
	Solenoid Valve **D** leaking at the needle.	Clean or change needle and seat.
	Orifice in flow guide contaminated.	Replace flow guide.
Leakage (Elevator sinks away from floor).	Leak at **N6, S6, XO, VO, WO** or **HO**.	Replace and test in sequence.
	Other valves (ex. handpump) in the system, leaking.	Where possible, isolate and check.
	Contraction of oil during cooling, especially from 35°C or above.	Consider oil cooler to keep oil temperatures down.

Valves are already adjusted and tested. Check electrical operation before changing valve settings. Test that the correct solenoid is energised, by removing nut and raising solenoid slightly to feel pull.

Ⓐ For checking the operation of the solenoids, remove the top nuts. By lifting the coils a few millimeters, the magnetic pull of the coil can be felt. For testing, the operation of the elevator car can also be controlled by lifting and replacing the coil.

If the coil gets too hot, the coil has to be mounted onto the solenoid and the following adjustments have to be carried out on normal travels from floor to floor.

Standard settings: Adjustments **7 & 9**, screwheads level with the hexagon heads.

EN ISO 9001

KV System Leakage
(re-levelling)

Solenoid Valves

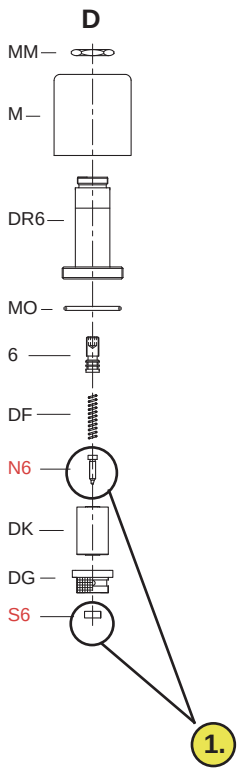

0-Ring-Size
EO 3,5 x 1,5 - P UO 17 x 1 - V YO 10 x 1 - V XO 5,28 x 1,78 - P HO 5,28 x 1,78 - V VO 5,28 x 1,78 - V
O-Ring: V=FKM-Viton P=NBR-Perbunan

Adjustments



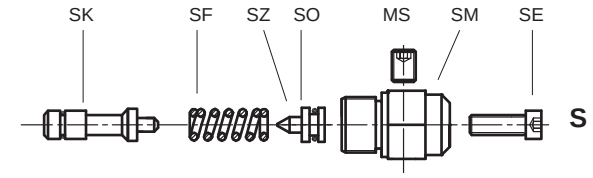

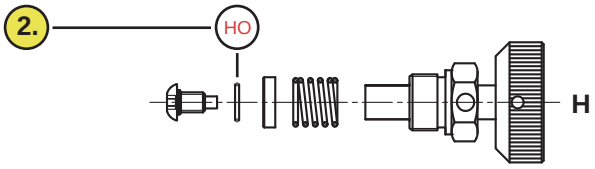

In case of down leakage, replace and test in the following order: S6, N6, HO, V complete, XO (2x XO with KV2).



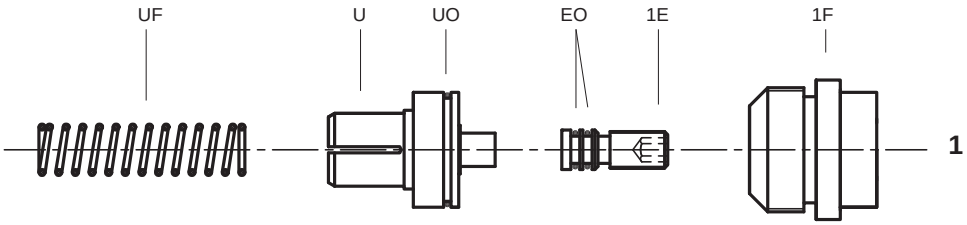

Flow Valves

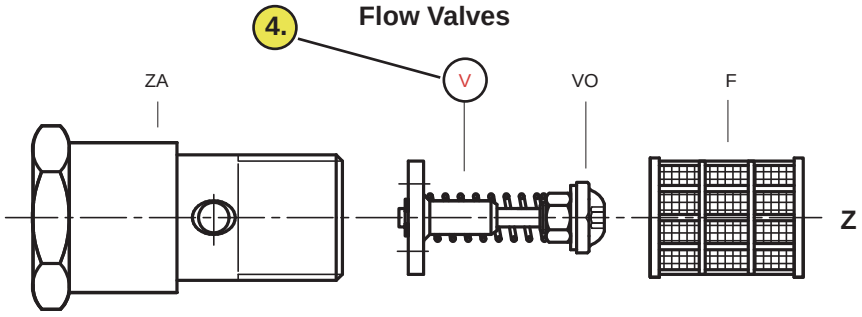

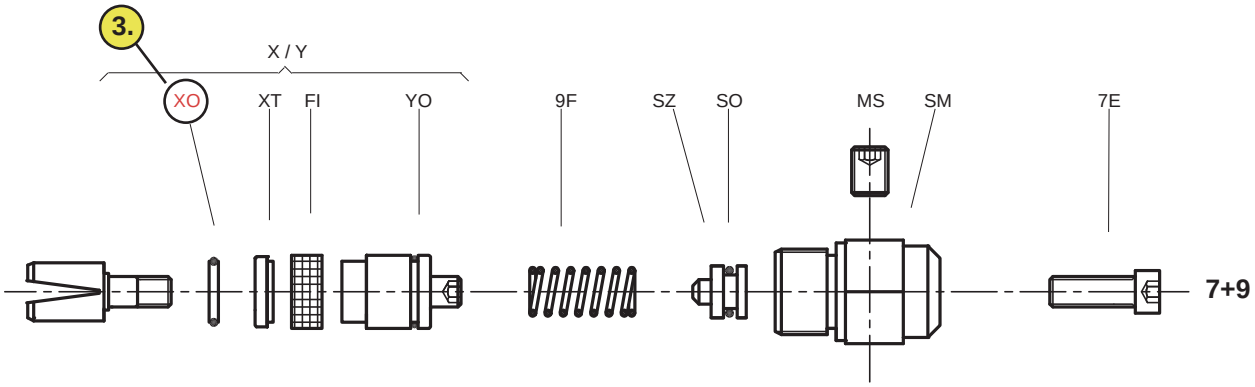

KV Spare Parts List

EN ISO 9001

Pos.	No.	Item
1	1F	Flange - Bypass
	1E	Adjustment - Bypass
	EO	0-Ring - Adjustment (3,5x1,5 - P)
	U	Flow Guide - Bypass
	UO	0-Ring - Bypass (17x1 - V)
	UF	Spring - Bypass
5	5	Adjustment - Up Stop
6	6	Adjustment - Down Acceleration
7+9	7E	Adjustment - Down Valve
	9F	Spring - Down Valve
	YO	0-Ring - Flow Guide (10x1 - V)
	XO	Seal - Flow Guide (5.28x1.78 - V)
	XT	0-Ring Disc
	FI	Filter - Down Valve
	X	Down Flow Guide (Brass)
	Y	Down Levelling Flow Guide (Steel) - KV2
	Y	Down Flow Guide (Steel) - KV1
S	SE	Adjustment Screw - Relief Valve
	SM	Hexagonal - Relief Valve
	MS	Locking Screw
	SO	0-Ring - Nipple
	SZ	Nipple - Relief Valve
	SF	Spring - Relief Valve
	SK	Piston - Relief Valve
H	H	Manual Lowering - Self Closing
	HO	Seal - Man. Lowering (0-Ring 5.28x1.78 - V)
HA	HA	Adjustable Manual Lowering
KS	KS	Slack Rope Valve
A	MM	Nut Solenoid
	AD	Collar Solenoid
	M	Coil Solenoid (indicate voltage)
	AR	Tube Solenoid 'Up'
	MO	0-Ring Solenoid
	AN	Needle Solenoid 'Up'
	AF	Spring Solenoid 'Up'
	AH	Seat Housing 'Up'
	AS	Seat Solenoid 'Up'
C+D	M	Coil Solenoid (indicate voltage)
C	DR	Tube - Solenoid 'Down', w/o adj. 6
D	DR6	Tube Solenoid 'Down', with adj. 6
	MO	0-Ring Solenoid
	DF	Spring Solenoid 'Down'
C	DN	Needle Solenoid 'Down'
D	N6	Needle Solenoid 'Down' (Nipple)
C	HN	Needle Solenoid 'Down'
	DK	Core Solenoid 'Down'
	DG	Seat Housing 'Down'(Solen.D with screen)
C	S6	Seat Solenoid 'Down'
C	CO	0-Ring Seat Housing
Z	ZA	Cylinder Thread Connection
	V	Check Valve
	VO	0-Ring Check Valve (5,28x1,78 - V)
	F	Main Filter
L	L	Gauge Shut Off Cock
0-Rings: V=FKM-Viton P=NBR-Perbunan		

Solenoid Valves

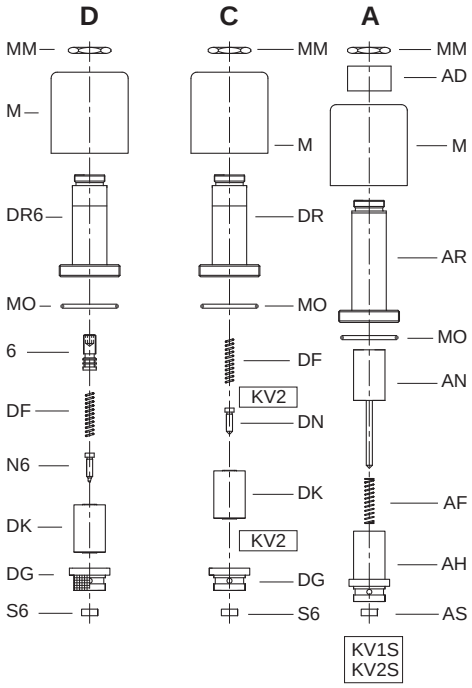

Adjustments

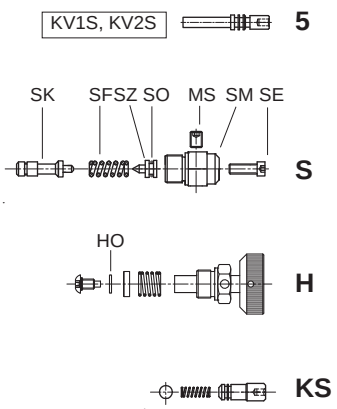

Flow Valves

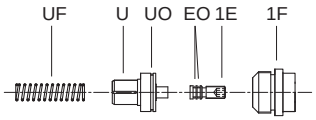

In case of down leakage, replace and test in the following order:
S6, N6, HO, V complete, XO,
(2x XO with KV2).

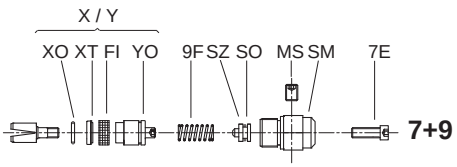

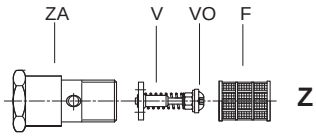

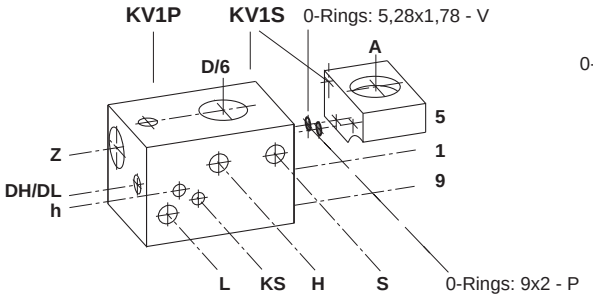

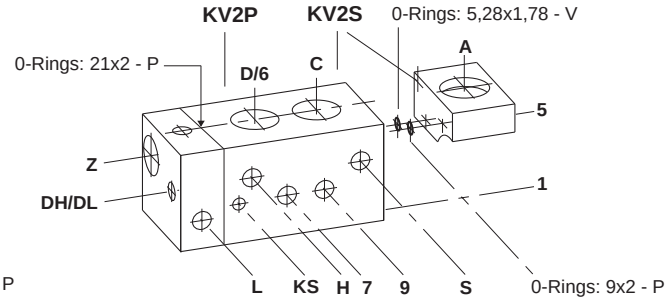

Slack Rope Valve `KS´

Purpose

In the case of the operation of the safeties in a 1:2 hydraulic lift system where the weight of the car is no longer carried by the ropes, the electrical supply to the elevator should automatically be switched off. As the ram comes to a stop, usually after about 60 cm, a limited slack rope condition will occur. The **KS** Slack Rope Valve avoids the ram being lowered by the opening of the manual lowering valve which would otherwise cause additional slack rope. The **KS** Slack Rope Valve prevents the pressure holding up the ram from being evacuated through the manual lowering valve.

Function

The **KS** valve is adjusted to a pressure just above the pressure produced by the weight of the ram. When under normal operating conditions, the weight of the car acts upon the ram through the 1:2 roping, the resulting pressure is sufficient to open the poppet of the **KS** valve when the manual lowering **H** is opened, allowing the car to descend as required. When however the`safeties´ have operated and only the weight of the ram and sheave block are acting upon the hydraulic system, the resulting pressure is too low to open the **KS** valve. The ram and sheave block can not be lowered.

Adjustment

The **KS** is adjusted with a 3 mm Socket Key by turning the screw **K** `in´ for higher pressure and `out´ for lower pressure. With **K** turned all the way `in´, then half a turn back out, the unloaded car should descend when the **D** solenoid alone is energised. Should the car not descend, **K** must be backed off until the car just begins to descend, then backed off a further half turn to ensure that with cold oil, the car can be lowered as required.

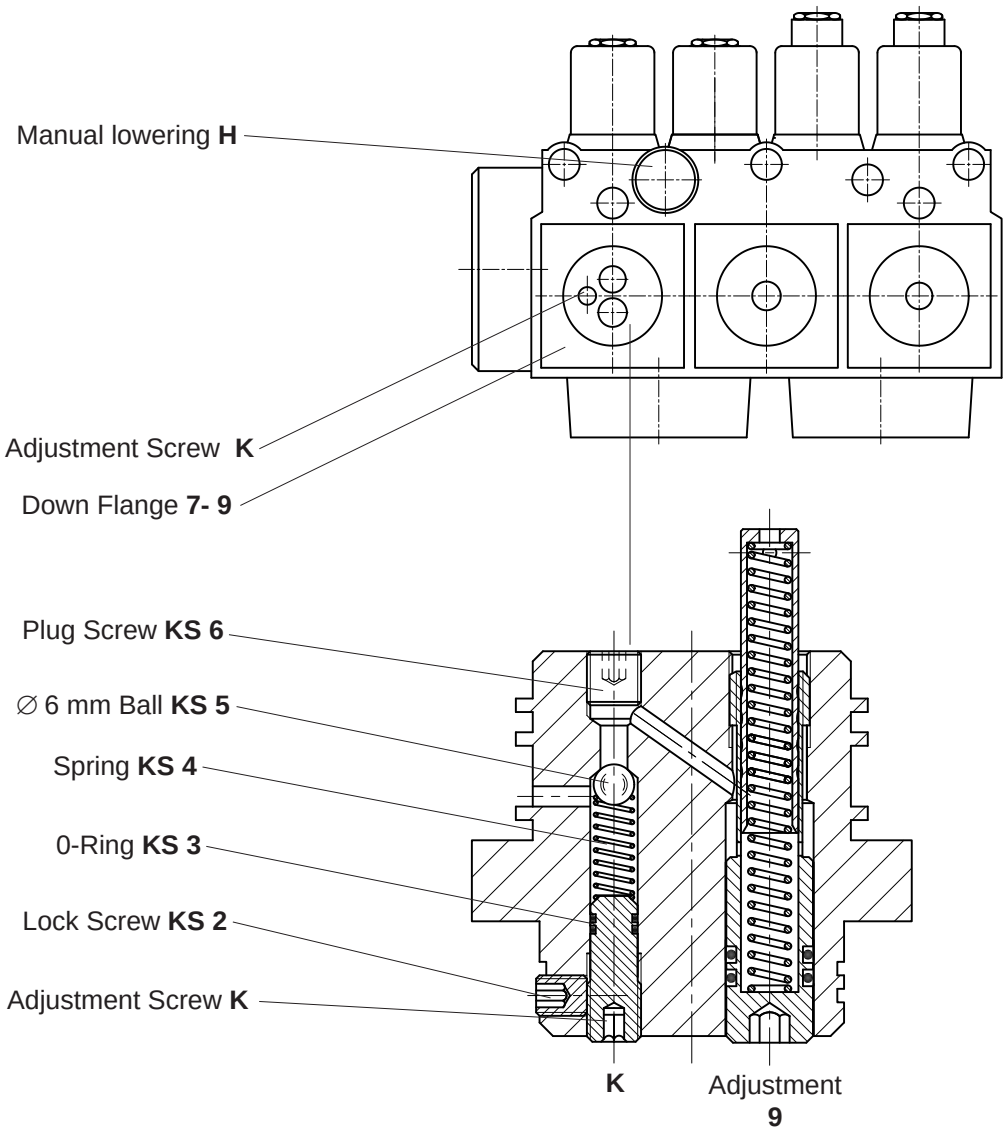

EN ISO 9001

Overheating of Power Units - System Leakage

Oil temperatures above 55 °C (130° F) should be avoided, otherwise the efficiency of the pump drops considerably and its life is reduced. Aging of the oil is also accelerated.

Possible causes of overheating:

1. Up levelling too long due to the levelling speed being too slow or the slow down switch being set too low.
2. Machine room ventilation inadequate.
3. The frequency of operation is too high for the normal rate of heat dissipation.

Temporary solution:

As a temporary measure to avoid overheating of the oil resulting in the shut down of the elevator, the down speed can be slowed to reduce frequency of operation until a permanent solution is installed.

Cooling systems

a. If the degree of overheating is not excessive and it takes for example two to three hours for the oil temperature to rise from 20° to 55°C (70° to 130° F), it may be sufficient to improve air circulation around the power unit, for example through the installation of a 0.05 to 0.10 kW ventilator extracting air out of the machine room or through a fan of similar power, blowing air over the power unit.

b. Should the above be inadequate, depending on the size of the elevator, it will be necessary to install a 10-50 l/min. (3 - 13 gpm) pump to circulate the hot oil through an air cooled radiator of about 0.1 to 0.2 fan kW. It is also essential that there is sufficient extraction of warm air out of the machine room or that the cooler is out side of the machine room, for example in the elevator shaft. The effective cooling power of an air cooled radiator should not to be confused with the power of the fan drive which normally need only be 0.1 or 0.2 kW. Normally, the effective cooling power of a cooler need only be approximately ¼ of the main hydraulic elevator motor, in the case of submersible drives.

Cooling systems for the above purpose should be switched into operation when the oil reaches 30° - 35°C (85° - 95° F).

System leakage (re-levelling)

The aim of manufacturers of hydraulic elevator control valves is to produce valves with zero leakage. Due to fine contamination in the oil perfect sealing between valve parts may not always be achieved, leading to a slow down leak of the elevator car.

It would become unnecessarily expensive to strive for perfect sealing in every valve in operation. Therefore, because code requirements assure a safe relevelling system whether descent of the car is caused by valve leakage or through the cooling of the oil in the cylinder pressure system, a minor leakage of the control valve can be tolerated.

1. The European Code EN 81-2 require: that the loaded elevator does not leak downwards by more than 10 mm (3/8“) in 10 minutes. This is the standard used to determine if a valve should be serviced for leakage.
2. For practical reasons, a quicker method for judging valve leakage is to close the ball valve in the cylinder line and observe the gauge showing pressure in the cylinder chamber of the valve. If this pressure falls to zero in less than 20 secs, it may be necessary to service the valve, depending on the diameter of the main ram and sensitivity of the customer.
3. Down sinking giving the impression of leakage can be due to cooling of the oil.

When the elevator is at rest and the temperature of the oil falls, contraction of the oil in the cylinder and piping causes the car to sink. This sinking is very slow but overnight without relevelling could amount to as much as half a meter, depending on the temperature drop of the oil and the volume of oil in the cylinder system. The elevator relevelling system, operating normally however, keeps the car at floor level.

4. In the case of Blain EV valves, see page 10 EV and 16 KV indicating where valve down leakage can occur.

EN ISO 9001

T\EV\0_3-4\2d\

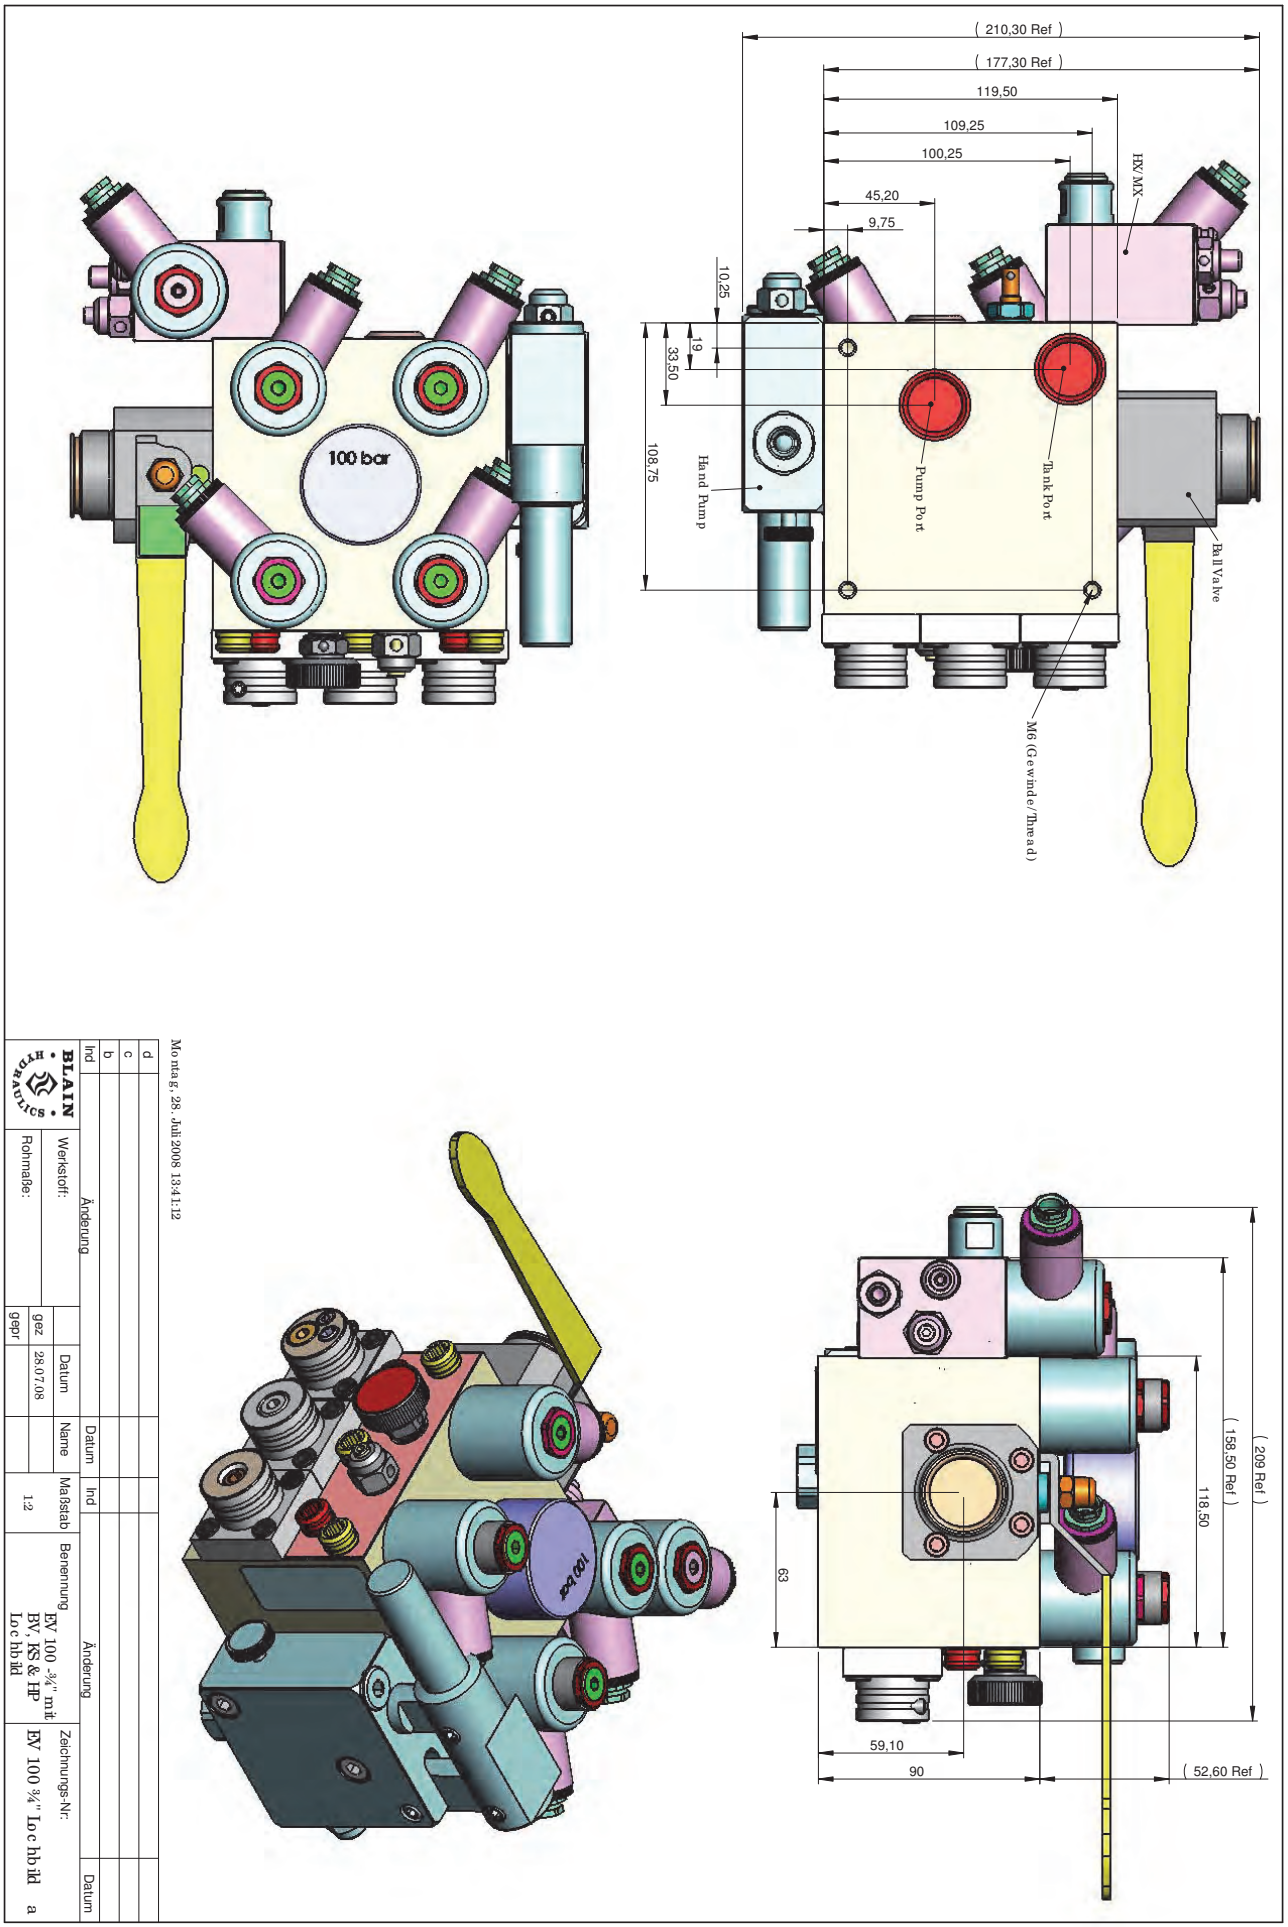

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

EN ISO 9001

T\EV\1_1-2 und 2\2d\

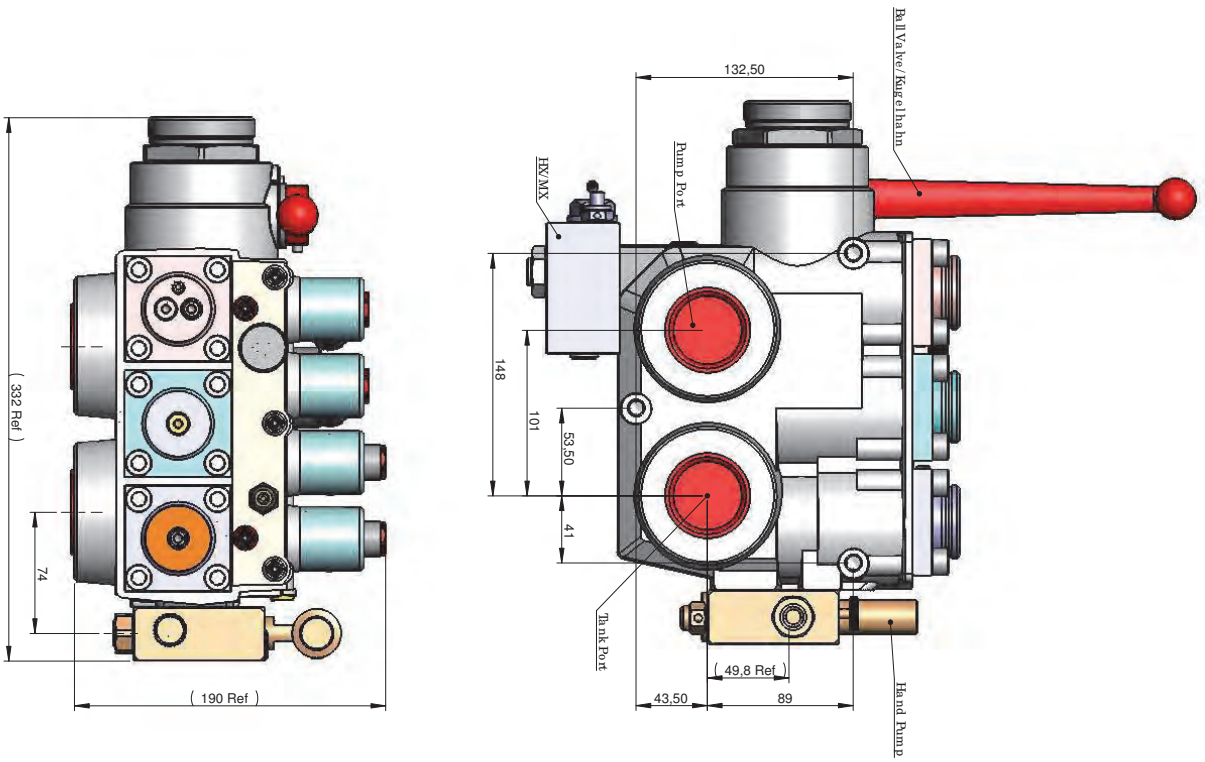

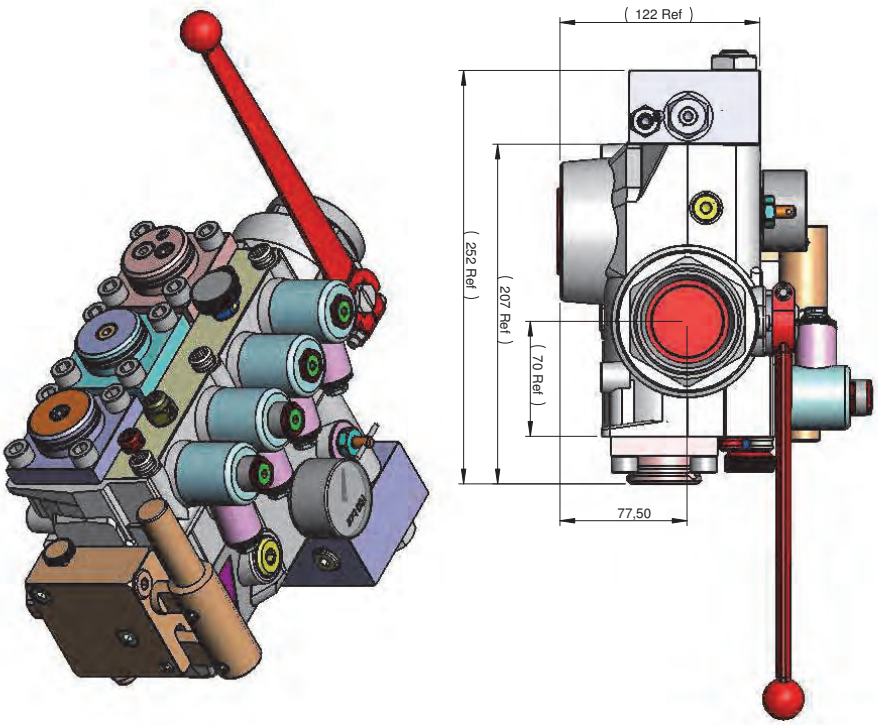

Montag, 9. März 2009 16:13:13

BLAIN HYDRAULICS									
Rohmaße:	Werkstoff:		Änderung	Ind					d
				b					c
				Ind					b
gepr	gez	Datum							
		29.07.08							
		Name		Datum					
				Ind					
1:2	Maßstab								
Benennung			Änderung						
EV 100 1½" mit HX, HP, BV Loc hbld									
Zeichnungs-Nr:									
EV 100 1½" Loc hbld									
a				Datum					

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

EN ISO 9001

T:\EV\2_1-2\2d\

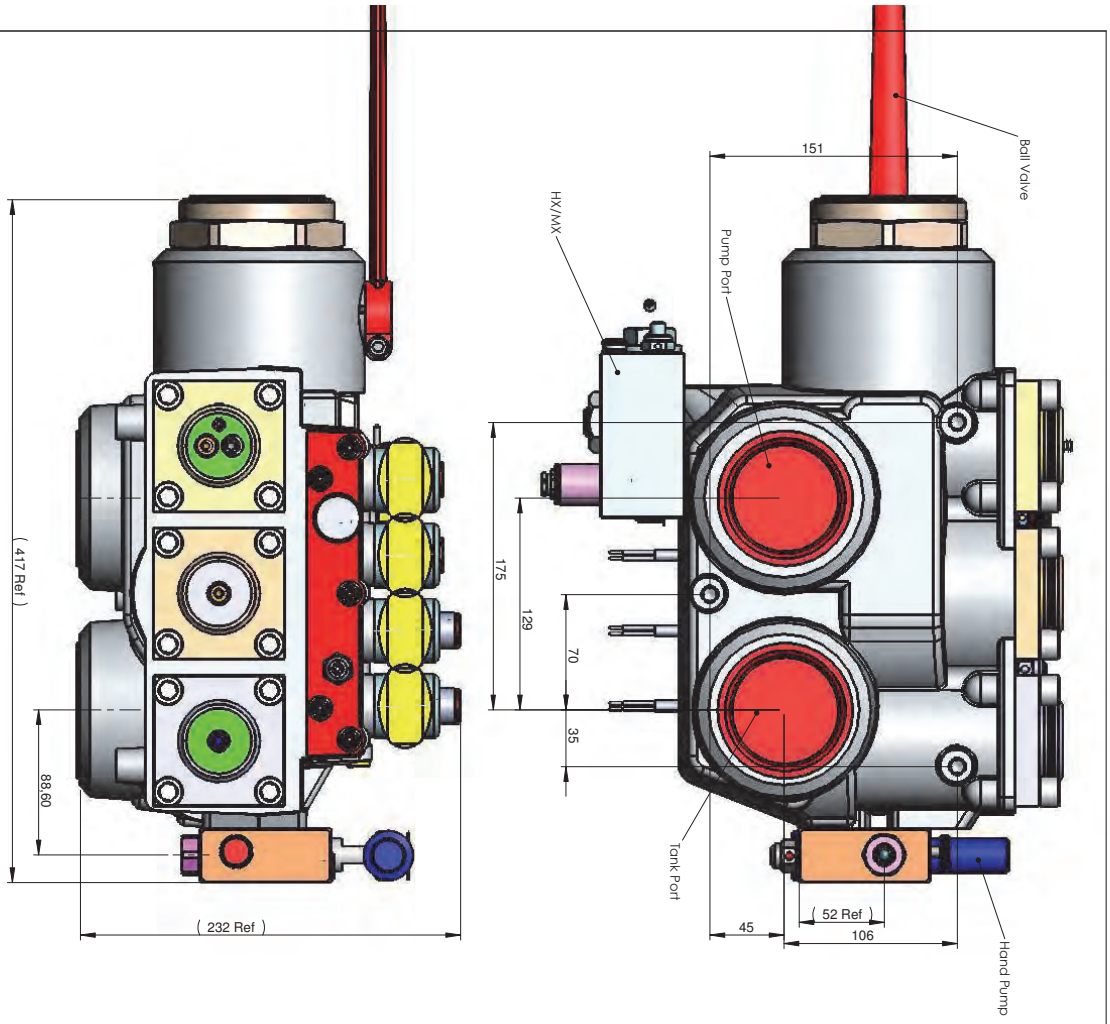

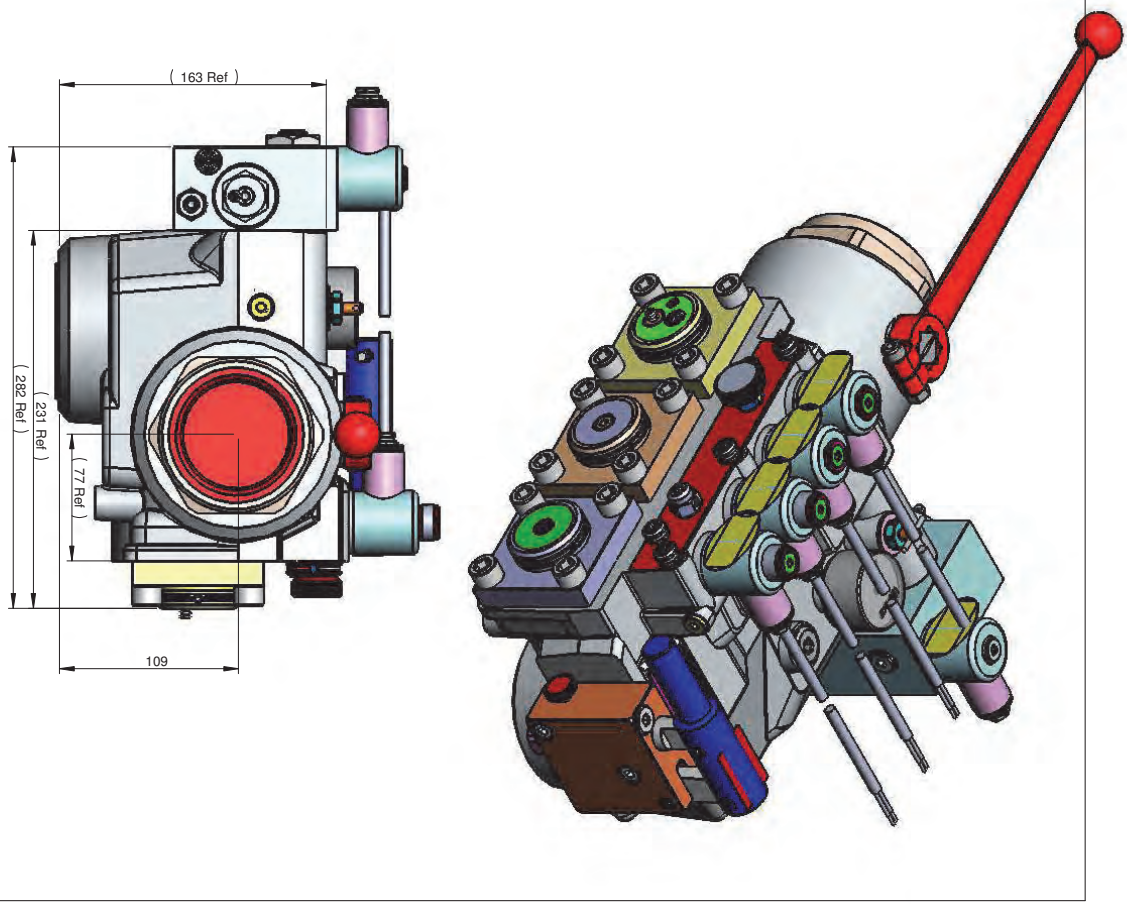

Dienstag, 6. April 2010 17:36:22

Ungefähres Gewicht in Gramm : 24337.79

BLAIN HYDRAULICS									
Rohmaße:	Werkstoff:	Änderung						Ind	b
									c
									d
gepr	gez	Datum	Name	Datum	Maßstab	Ind			
	06.04.10		JG						

EN ISO 9001

T:\SEV\2d\

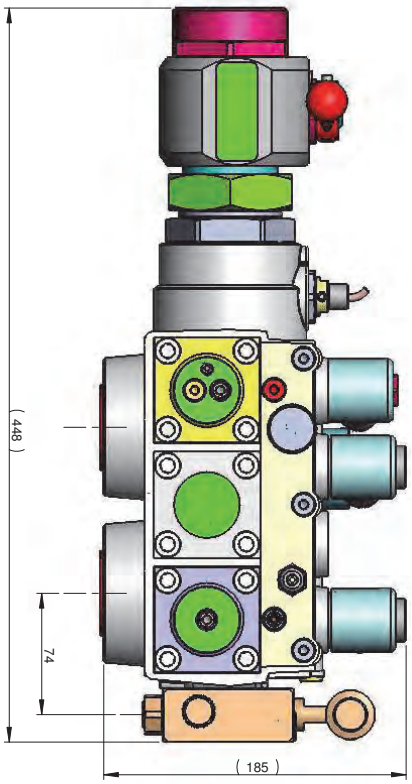

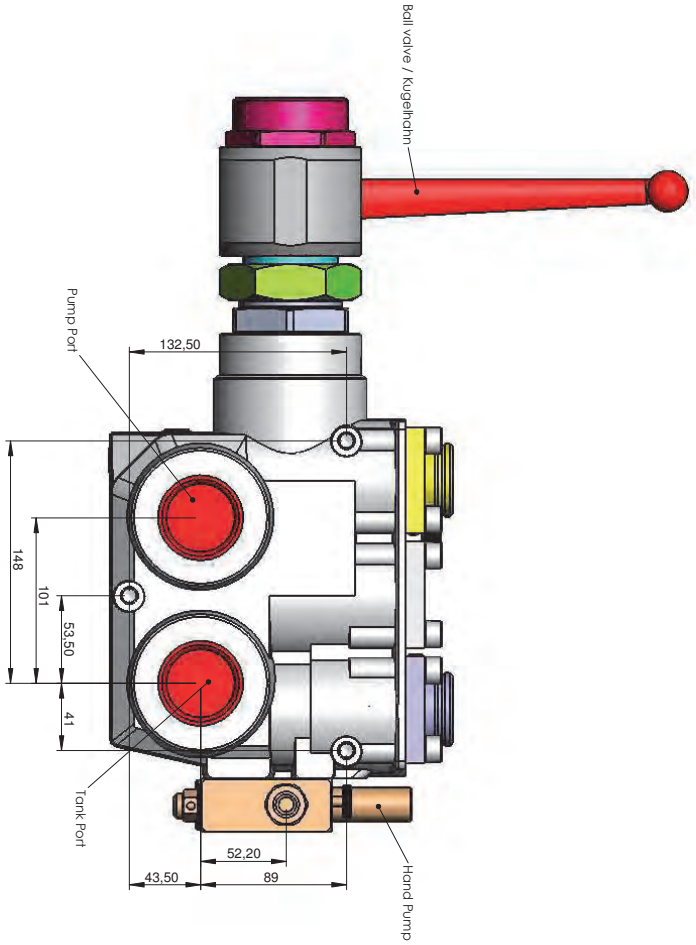

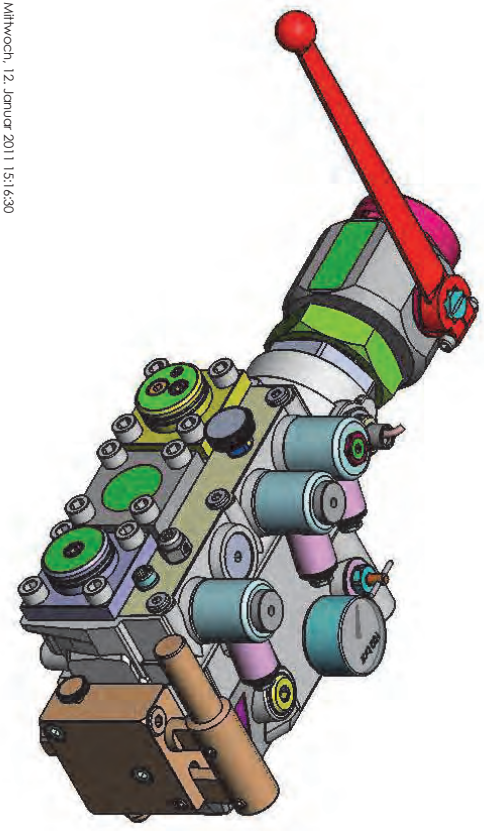

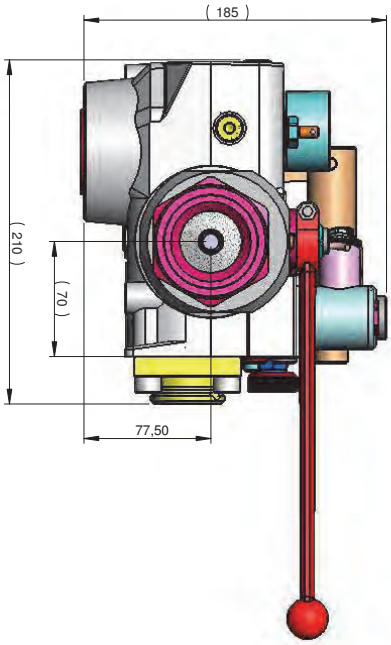

Mittwoch, 12. Januar 2011 15:16:30

BLAIN HYDRAULICS											
Rohmaße:	Werkstoff:	Änderung	Ind	b	c	d					
gepr	gez										
	21.12.07	Datum									
	PM	Name	Datum								
	1:3	Maßstab	Ind								
SEV 1½" Lochbild		Benennung	Änderung								
SEV 1.5 Lochbild		Zeichnungs-Nr:									
			Datum								

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

T:\KV\KV1P\2d\

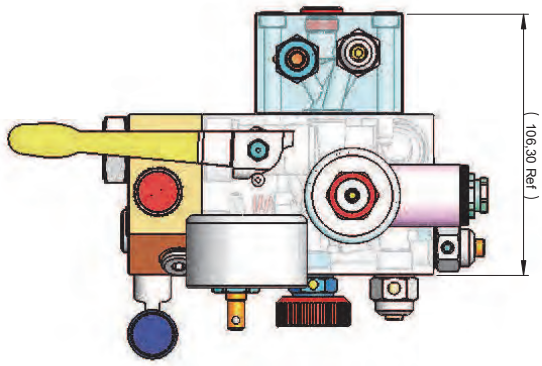

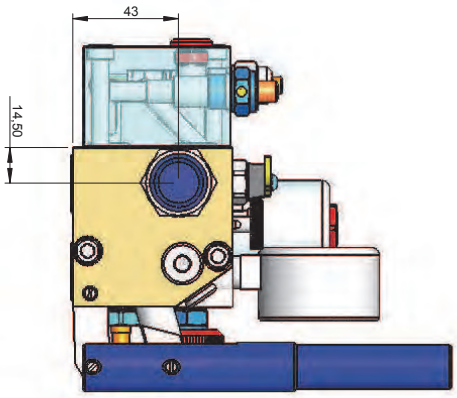

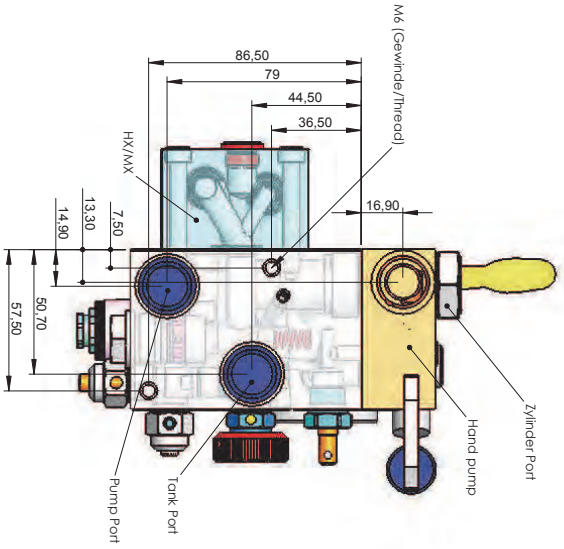

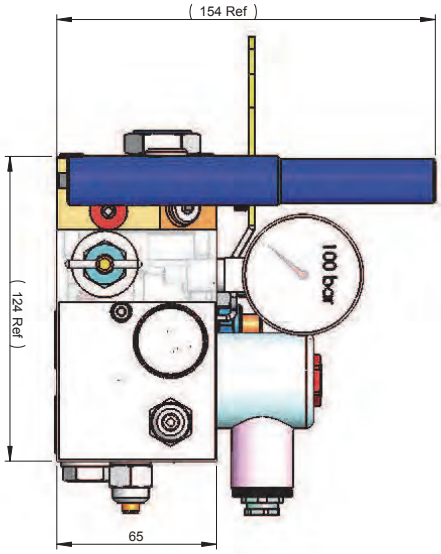

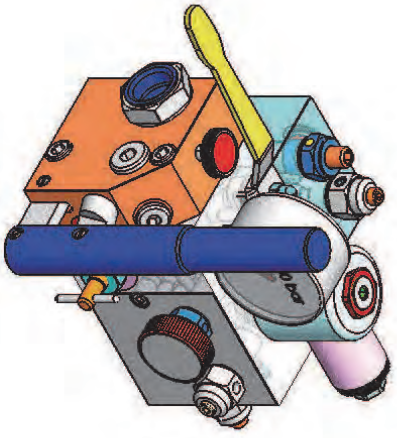

Montag, 28. Juli 2008 10:57:37

BLAIN HYDRAULICS	Werkstoff:	Änderung	Ind					d
	Rohmaße:		b					c
gepr	gez							
	28.07.08	Datum						
		Name	Datum					
	1:2	Maßstab	Ind					
	KV1P mit BV, HP, HX, KS Lochbild	Benennung	Änderung					
	KV1P-Lochbild a	Zeichnungs-Nr:	Datum					

EN ISO 9001

T:\KV\KV2\2d\

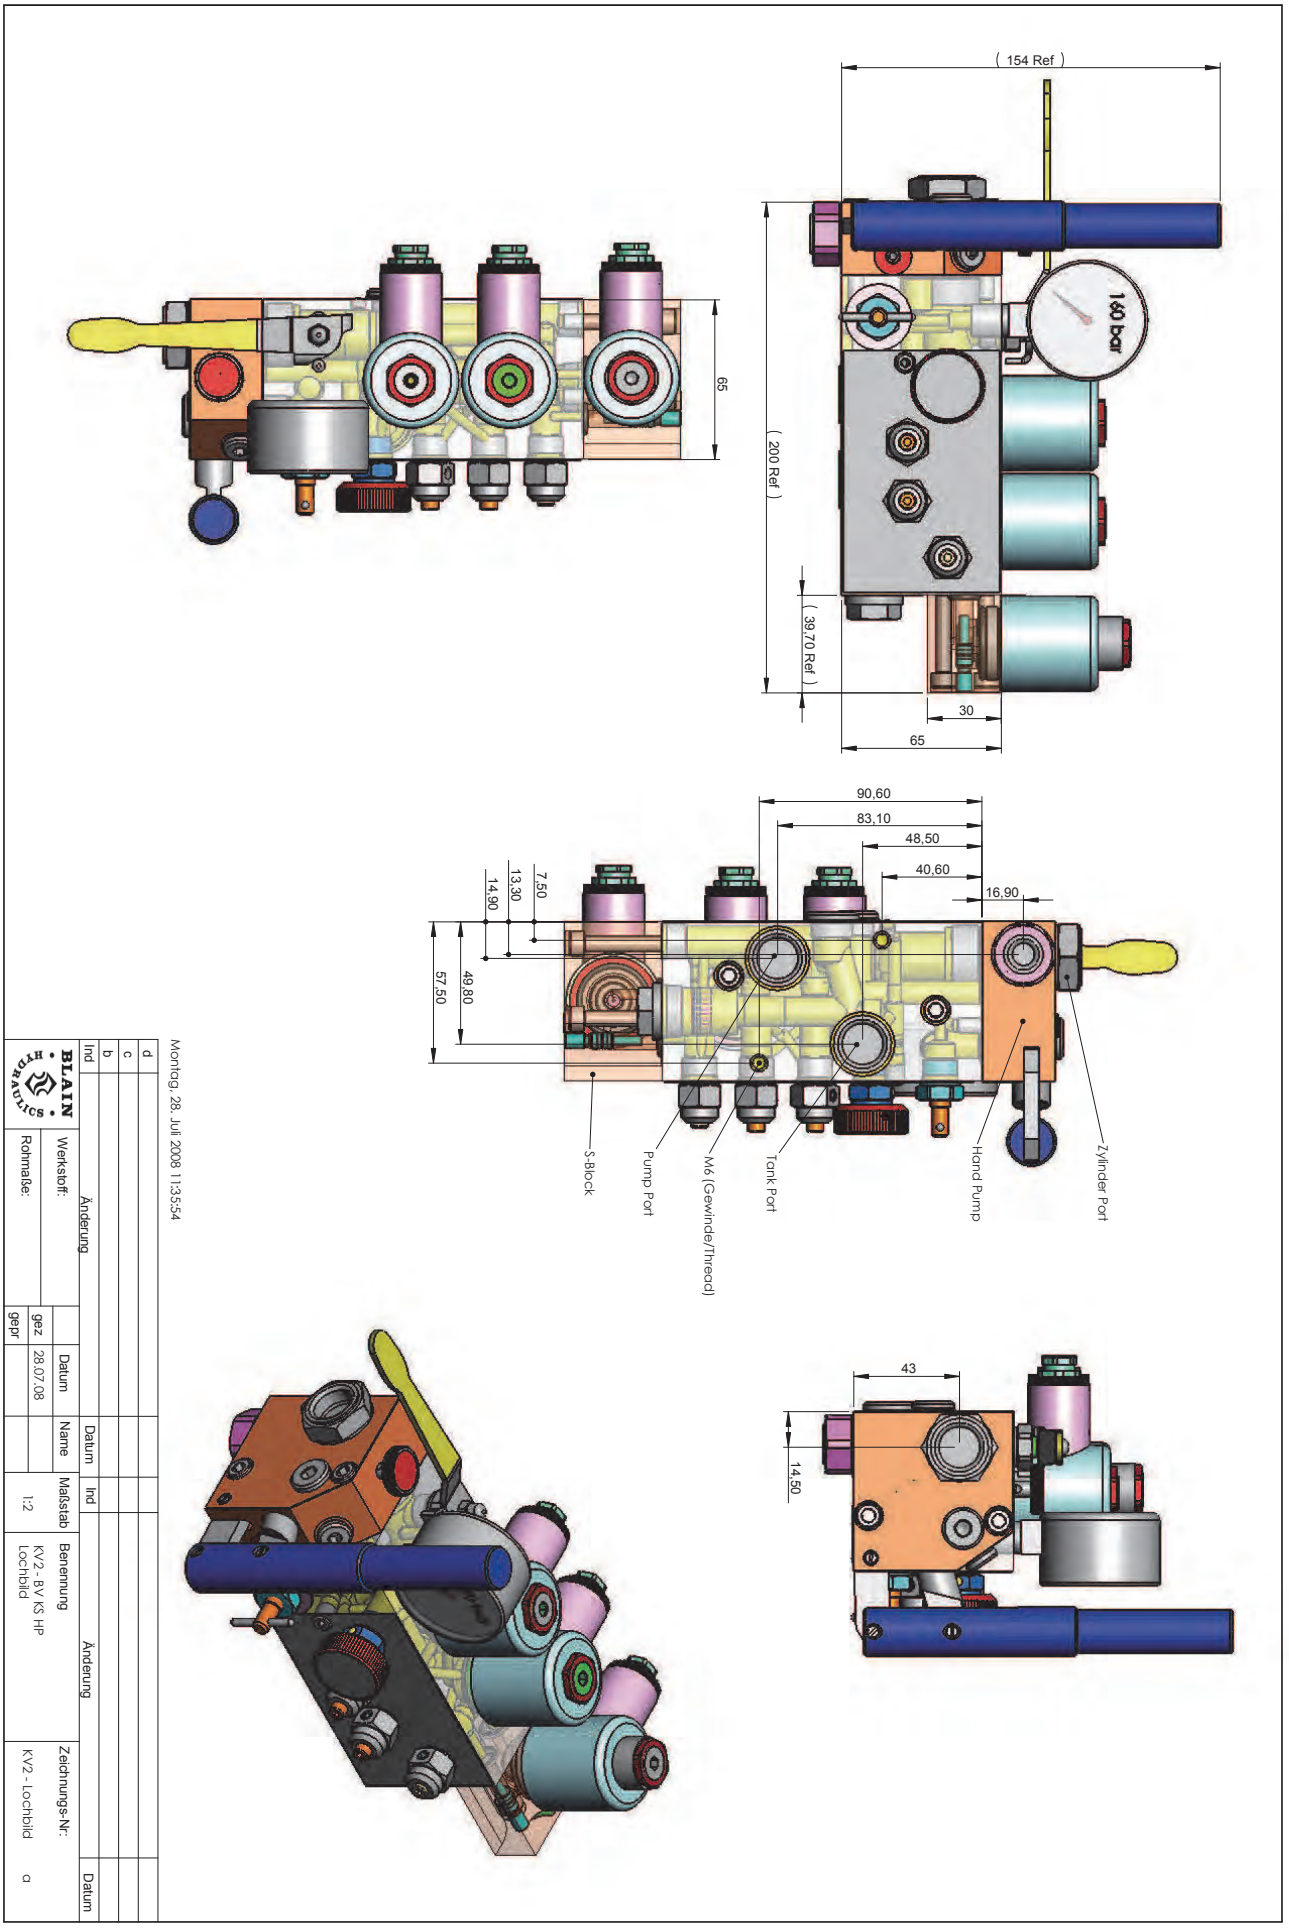

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

EN ISO 9001

T:\EV\0_3-4\2d\ P.Mehta Montag, 6. September 2010 11:47:12

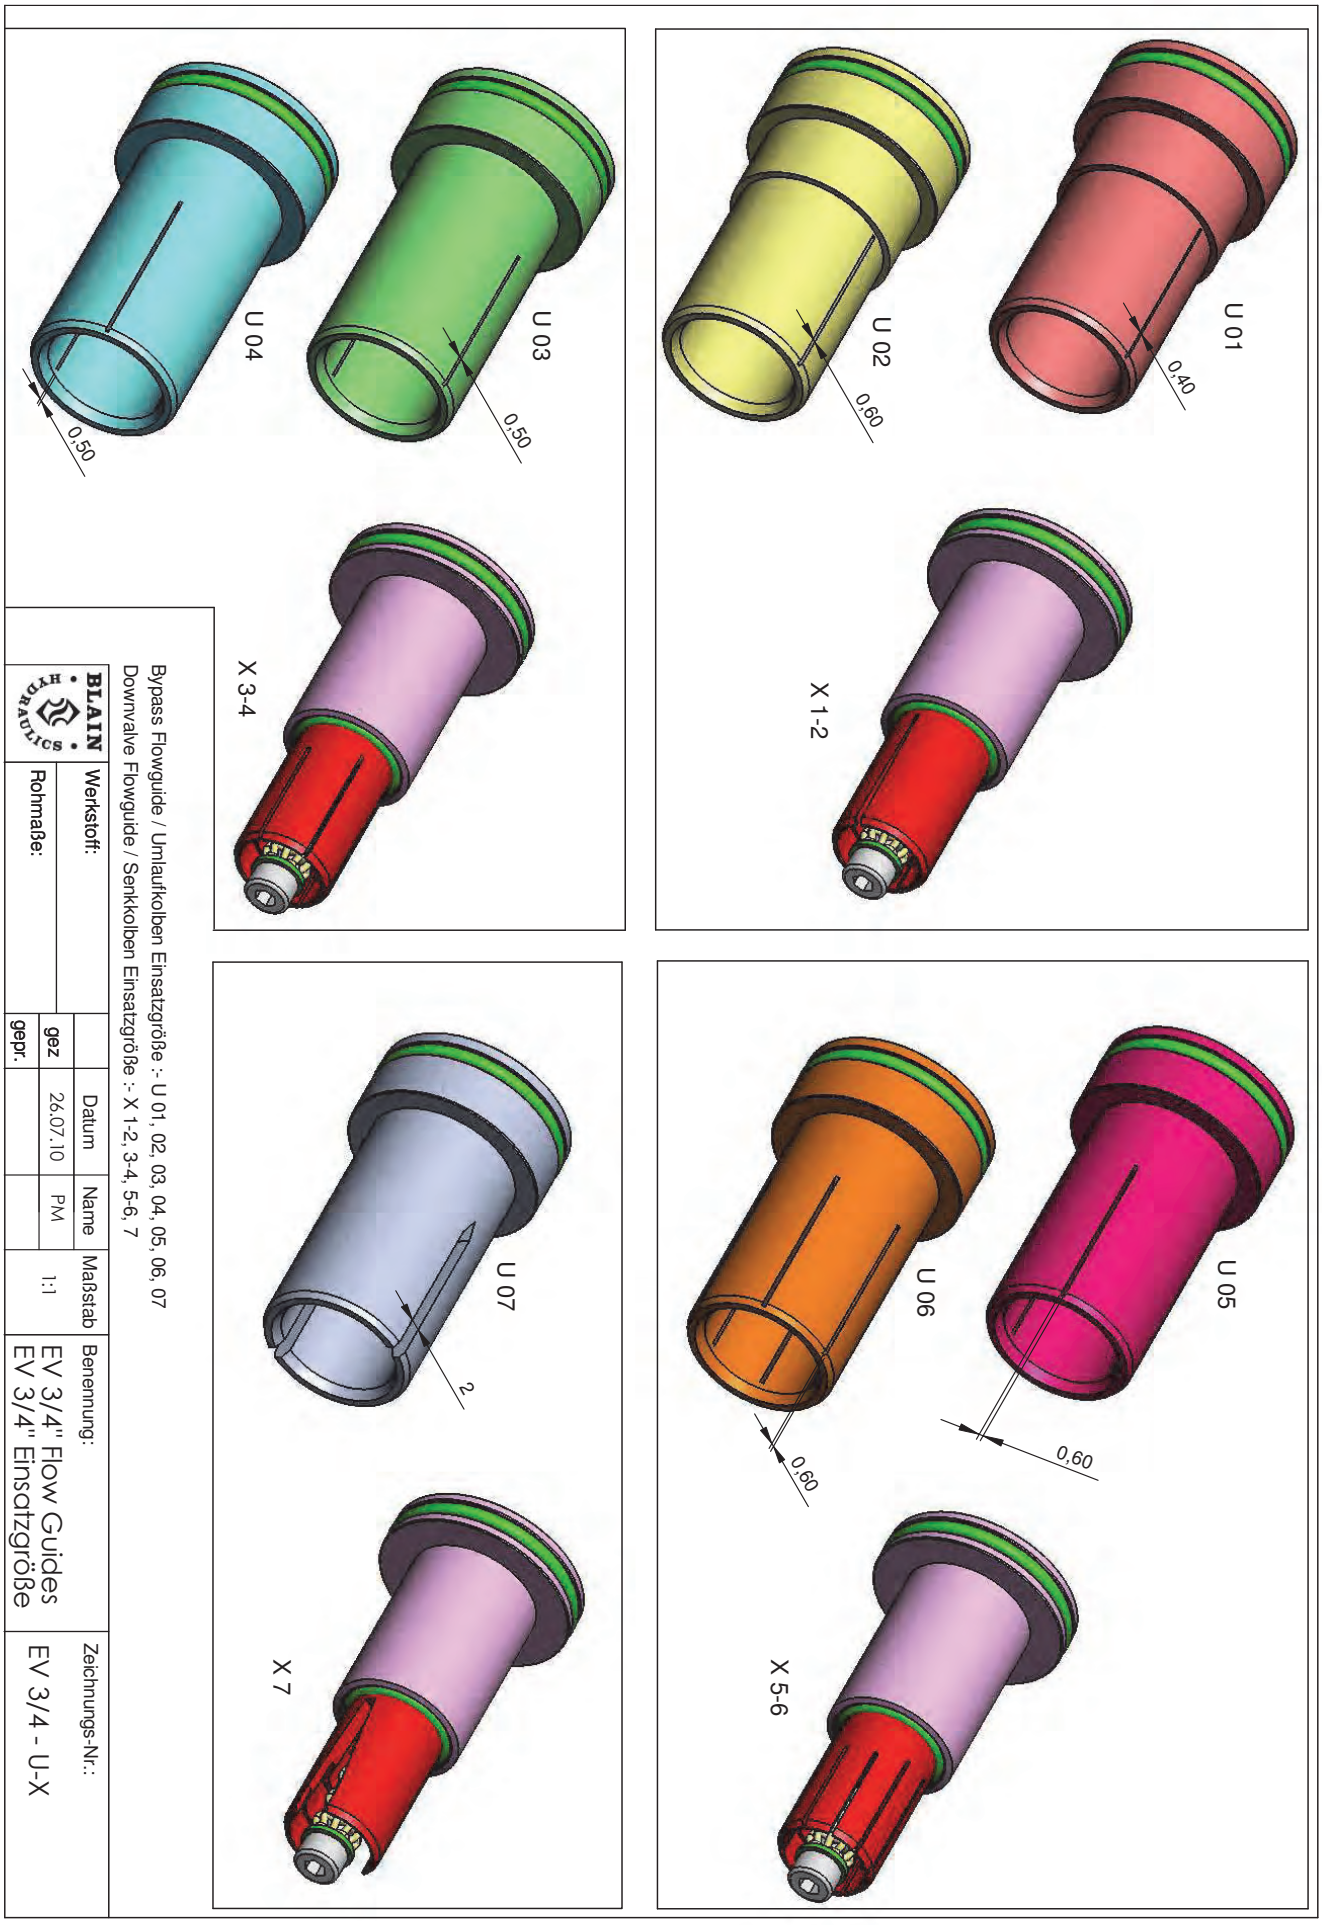

Bypass Flowguide / Umlaufkolben Einsatzgröße :- U 01, 02, 03, 04, 05, 06, 07

Downvalve Flowguide / Senkkolben Einsatzgröße :- X 1-2, 3-4, 5-6, 7

BLAIN HYDRAULICS	Werkstoff:		Maßstab	Benennung:
	Rohmaße:	Name / Datum	1:1	EV 3/4" Flow Guides EV 3/4" Einsatzgröße
		gez PM 26.07.10		
		gepr.		Zeichnungs-Nr.: EV 3/4 - U-X

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

EN ISO 9001

T:\EV\1_1-2 und 2\2d\

Bypass Flowguide / Umlaufkolben Einsatzgröße :- U 0,1, 2, 3, 4, 5, 6, 7

Downvalve Flowguide / Senkkolben Einsatzgröße :- X 0, 1-2, 3-4, 5-6, 7

Montag, 6. September 2010 11:46:01

d								
c								
b								
Ind	Änderung		Datum	Name	Datum	Ind	Änderung	Datum
BLAIN • HYDRAULICS •	Werkstoff:		gez	PM				
	Rohmaße:		03.09.10					
		gepr						

Maßstab	Benennung		Zeichnungs-Nr:
1:2	EV 1½-2" Flow Guides EV 1½-2" Einsatzgroße		EV 1.5-2-U-X

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

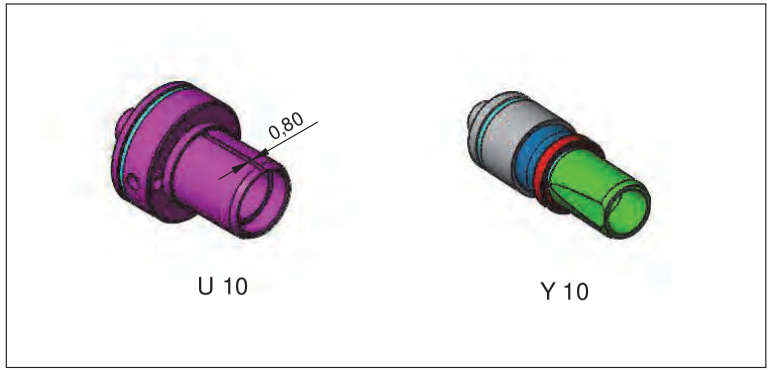

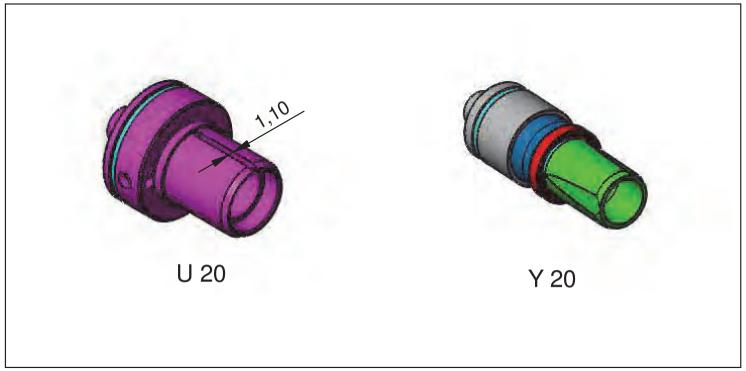

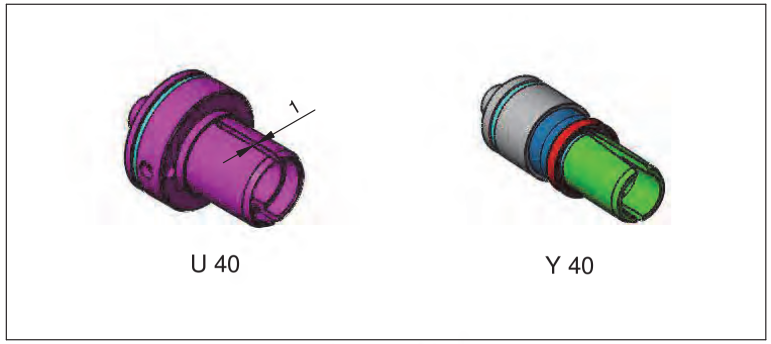

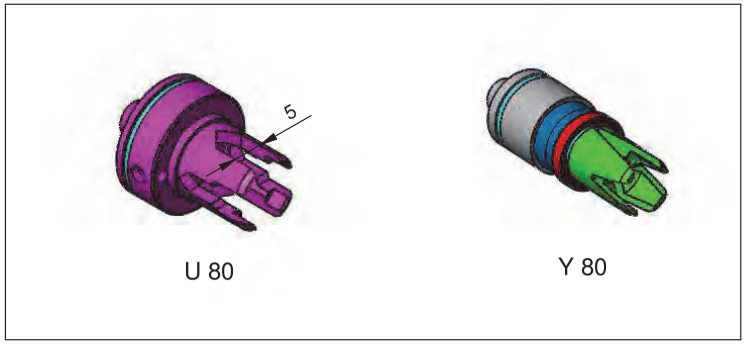

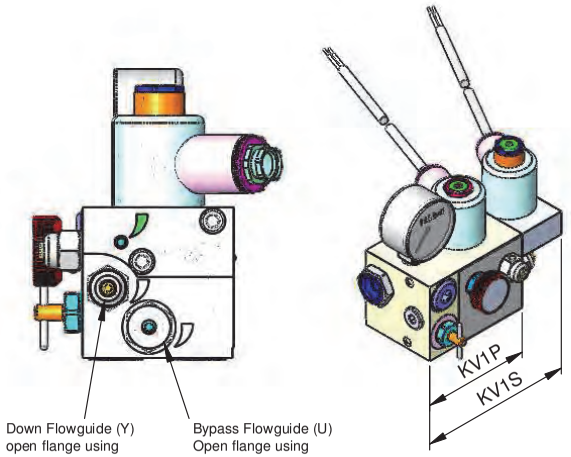

Bypass Flowguide / Umlaufkolben Einsatzgröße :- U 10, 20, 40, 80
Downvalve Flowguide / Senkkolben Einsatzgröße :- Y 10, 20, 40, 80

Freitag, 26. November 2010 11:15:33

Applicable for KV1P & KV1S

d	d	00.00.00	g	g	00.00.00
c	c	00.00.00	f	f	00.00.00
b	b	00.00.00	e	e	00.00.00
Ind	Änderung	Datum	Ind	Änderung	Datum

BLAIN HYDRAULICS	Werkstoff:		Datum	Name	Maßstab	Benennung:	Zeichnungs-Nr.:
	Rohmaße:	gez	06.09.10	PM	1:1	KV1 Flowguides KV1 Einsatzgrösse	KV1-U-Y
		gepr.					

EN ISO 9001

T:\KV\common parts\2D\

Bypass Flowguide / Umlaufkolben Einsatzgröße :- U 10, 20, 40, 80

Downvalve Flowguide (Adjustment 7)/ Senkkolben Einsatzgröße (Ein.7) :- X10, 20, 40, 80..... (Brass / Messing)

Downvalve Flowguide (Adjustment 9)/ Senkkolben Einsatzgröße (Ein.9) :- Y10, 20, 40

Freitag, 26. November 2010 11:33:42

Applicable for KV2P & KV2S

Ind	Änderung	Datum	Name
d	d	00.00.00	
c	c	00.00.00	
b	b	00.00.00	

Ind	Änderung	Datum	Name
g	g	00.00.00	
f	f	00.00.00	
e	e	00.00.00	

BLAIN HYDRAULICS

Werkstoff:		Datum	Name	Maßstab
	gez	06.09.10	PM	1:1
Rohmaße:	gepr.			

Benennung: KV2 Flowguides
KV2 Einsatzgrösse

Zeichnungs-Nr.: KV2-U-Y

Blain Hydraulics GmbH Böllinger Höfe D-74078 Heilbronn Tel.: 07131-28210 Fax: 07131-485216

EN ISO 9001

Flow - Pressure Tables (metric)

Ram Ø • Area • Speed • Flow
Piston Ø • Aire • Vitesse • Débit
Kolben Ø • Fläche • Geschwindigkeit • Durchfluss
Pistón Ø • Area • Velocidad • Caudal

m/sec.		0,05	0,10	0,15	0,20	0,25	0,30	0,35	0,40	0,45	0,50	0,55	0,60	0,70	0,80	0,90	1,00
Ø mm	cm²	l/min.															
35	9,6	2,9	5,8	8,7	11,5	14	17	20	23	26	29	32	35	40	46	52	58
40	12,6	3,8	7,5	11,3	15,1	19	23	26	30	34	38	41	45	53	60	68	75
45	15,9	4,8	9,5	14,3	19,1	24	29	33	38	43	48	52	57	67	76	86	95
50	19,6	5,9	11,8	17,7	23,6	29	35	41	47	53	59	65	71	82	94	106	118
55	23,8	7,1	14,3	21,4	28,5	36	43	50	57	64	71	78	86	100	114	128	143
60	28,3	8,5	17,0	25,4	33,9	42	51	59	68	76	85	93	102	119	136	153	170
65	33,2	10,0	19,9	29,9	39,8	50	60	70	80	90	100	110	119	139	159	179	199
70	38,5	11,5	23,1	34,6	46,2	58	69	81	92	104	115	127	139	162	185	208	231
75	44,2	13,3	26,5	39,8	53,0	66	80	93	106	119	133	146	159	186	212	239	265
80	50,3	15,1	30,2	45,2	60,3	75	90	106	121	136	151	166	181	211	241	271	302
85	56,7	17,0	34,0	51,1	68,1	85	102	119	136	153	170	187	204	238	272	306	340
90	63,6	19,1	38,2	57,3	76,3	95	115	134	153	172	191	210	229	267	305	344	382
95	70,9	21,3	42,5	63,8	85,1	106	128	149	170	191	213	234	255	298	340	383	425
100	78,5	23,6	47,1	70,7	94,2	118	141	165	188	212	236	259	283	330	377	424	471
105	86,6	26,0	52,0	77,9	103,9	130	156	182	208	234	260	286	312	364	416	468	520
110	95,0	28,5	57,0	85,5	114,0	143	171	200	228	257	285	314	342	399	456	513	570
115	103,9	31,2	62,3	93,5	124,6	156	187	218	249	280	312	343	374	436	499	561	623
120	113,1	33,9	67,9	101,8	135,7	170	204	238	271	305	339	373	407	475	543	611	679
125	122,7	36,8	73,6	110,4	147,3	184	221	258	295	331	368	405	442	515	589	663	736
130	132,7	39,8	79,6	119,5	159,3	199	239	279	319	358	398	438	478	557	637	717	796
140	153,9	46,2	92,4	138,5	184,7	231	277	323	369	416	462	508	554	647	739	831	924
150	176,7	53,0	106,0	159,0	212,1	265	318	371	424	477	530	583	636	742	848	954	1060
160	201,1	60,3	120,6	181,0	241,3	302	362	422	483	543	603	664	724	844	965	1086	1206
170	227,0	68,1	136,2	204,3	272,4	340	409	477	545	613	681	749	817	953	1090	1226	1362
180	254,5	76,3	152,7	229,0	305,4	382	458	534	611	687	763	840	916	1069	1221	1374	1527
190	283,5	85,1	170,1	255,2	340,2	425	510	595	680	766	851	936	1021	1191	1361	1531	1701
200	314,2	94,2	188,5	282,7	377,0	471	565	660	754	848	942	1037	1131	1319	1508	1696	1885
210	346,4	103,9	207,8	311,7	415,6	520	623	727	831	935	1039	1143	1247	1455	1663	1870	2078
220	380,1	114,0	228,1	342,1	456,2	570	684	798	912	1026	1140	1254	1368	1597	1825	2053	2281
240	452,4	135,7	271,4	407,2	542,9	679	814	950	1086	1221	1357	1493	1629	1900	2171	2443	2714
260	530,9	159,3	318,6	477,8	637,1	796	956	1115	1274	1434	1593	1752	1911	2230	2548	2867	3186
280	615,8	184,7	369,5	554,2	738,9	924	1108	1293	1478	1663	1847	2032	2217	2586	2956	3325	3695
300	706,9	212,1	424,1	636,2	848,2	1060	1272	1484	1696	1909	2121	2333	2545	2969	3393	3817	4241

Ram Ø • Area • Load • Pressure
Piston Ø • Aire • Cargaision • Pression
Kolben Ø • Fläche • Gewicht • Druck
Pistón Ø • Area • Carga • Presión

kg		500	750	1000	1500	2000	2500	3000	3500	4000	4500	5000	6000	7000	8000	9000	10000
Ø mm	cm²	bar															
35	9,6	51	76	102	153	204	255	306	357	408	459	510	612	714	816	918	1020
40	12,6	39	59	78	117	156	195	234	273	312	351	390	468	546	625	703	781
45	15,9	31	46	62	93	123	154	185	216	247	278	308	370	432	493	555	617
50	19,6	25	38	50	75	100	125	150	175	200	225	250	300	350	400	450	500
55	23,8	21	31	41	62	83	103	124	145	165	186	206	248	289	330	372	413
60	28,3	17	26	35	52	69	87	104	121	139	156	173	208	243	278	312	347
65	33,2	15	22	30	44	59	74	89	103	118	133	148	177	207	237	266	296
70	38,5	13	19	26	38	51	64	76	89	102	115	127	153	178	204	229	255
75	44,2	11	17	22	33	44	56	67	78	89	100	111	133	155	178	200	222
80	50,3	9,8	15	20	29	39	49	59	68	78	88	98	117	137	156	176	195
85	56,7	8,6	13	17	26	35	43	52	61	69	78	86	104	121	138	156	173
90	63,6	7,7	12	15	23	31	39	46	54	62	69	77	93	108	123	139	154
95	70,9	6,9	10	14	21	28	35	42	48	55	62	69	83	97	111	125	138
100	78,5	6,2	9,4	13	19	25	31	38	44	50	56	62	75	87	100	112	125
105	86,6	5,7	8,5	11	17	23	28	34	40	45	51	57	68	79	91	102	113
110	95,0	5,2	7,7	10	16	21	26	31	36	41	47	52	62	72	83	93	103
115	103,9	4,7	7,1	9,4	14	19	24	28	33	38	43	47	57	66	76	85	94
120	113,1	4,3	6,5	8,7	13	17	22	26	30	35	39	43	52	61	69	78	87
125	122,7	4,0	6,0	8,0	12	16	20	24	28	32	36	40	48	56	64	72	80
130	132,7	3,7	5,5	7,4	11	15	19	22	26	30	33	37	44	52	59	67	74
140	153,9	3,2	4,8	6,4	9,6	13	16	19	22	26	29	32	38	45	51	57	64
150	176,7	2,8	4,2	5,6	8,3	11	14	17	19	22	25	28	33	39	44	50	56
160	201,1	2,4	3,7	4,9	7,3	9,8	12	15	17	20	22	24	29	34	39	44	49
170	227,0	2,2	3,2	4,3	6,5	8,6	11	13	15	17	19	22	26	30	35	39	43
180	254,5	1,9	2,9	3,9	5,8	7,7	9,6	12	14	15	17	19	23	27	31	35	39
190	283,5	1,7	2,6	3,5	5,2	6,9	8,6	10	12	14	16	17	21	24	28	31	35
200	314,2	1,6	2,3	3,1	4,7	6,2	7,8	9,4	11	13	14	16	19	22	25	28	31
210	346,4	1,4	2,1	2,8	4,2	5,7	7,1	8,5	9,9	11	13	14	17	20	23	26	28
220	380,1	1,3	1,9	2,6	3,9	5,2	6,5	7,7	9,0	10,3	12	13	16	18	21	23	26
240	452,4	1,1	1,6	2,2	3,3	4,3	5,4	6,5	7,6	8,7	9,8	11	13	15	17	20	22
260	530,9	0,9	1,4	1,8	2,8	3,7	4,6	5,5	6,5	7,4	8,3	9,2	11	13	15	17	19
280	615,8	0,8	1,2	1,6	2,4	3,2	4,0	4,8	5,6	6,4	7,2	8,0	9,6	11	13	14	16
300	706,9	0,7	1,0	1,4	2,1	2,8	3,5	4,2	4,9	5,6	6,2	6,9	8,3	9,7	11	13	14

$\frac{cm^2}{6,45} = in^2$ | m/sec x 197 = ft/min. | l/min. x 0,22 = Imp. gals | $\frac{mm}{25,4} = inches$ | l/min x 0,26 = US. gals | kg x 2,2 = lbs | bar x 14,7 = psi

Flow Guide Selection Charts

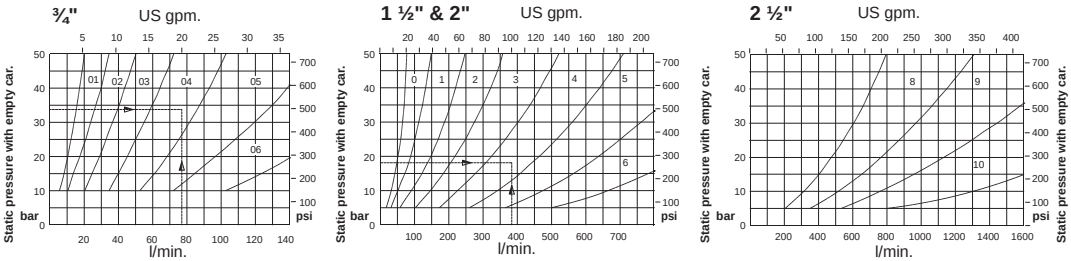

Flow - Pressure Tables (gpm/psi)

EN ISO 9001

Ram Ø • Area • Speed • Flow

ft/min		10	20	30	40	50	60	70	80	90	100	110	120	140	160	180	200
Ø inch	in²	US gpm															
1,4	1,5	0,8	1,6	2,4	3,2	4,0	4,8	5,6	6,4	7,2	8,0	8,8	9,6	11,2	12,8	14,4	16,0
1,6	2,0	1,0	2,1	3,1	4,2	5,2	6,3	7,3	8,4	9,4	10,5	11,5	12,5	14,6	16,7	18,8	20,9
1,8	2,5	1,3	2,6	4,0	5,3	6,6	7,9	9,3	10,6	11,9	13,2	14,6	15,9	18,5	21,2	23,8	26,5
2,0	3,1	1,6	3,3	4,9	6,5	8,2	9,8	11,4	13,1	14,7	16,3	18,0	19,6	22,9	26,1	29,4	32,7
2,2	3,8	2,0	4,0	5,9	7,9	9,9	11,9	13,8	15,8	17,8	19,8	21,7	23,7	27,7	31,6	35,6	39,5
2 1/2	4,9	2,6	5,1	7,7	10,2	12,8	15,3	17,9	20,4	23,0	25,5	28,1	30,6	35,7	40,8	45,9	51,0
2,6	5,3	2,8	5,5	8,3	11,0	13,8	16,6	19,3	22,1	24,8	27,6	30,4	33,1	38,6	44,2	49,7	55,2
2 3/4	5,9	3,1	6,2	9,3	12,4	15,4	18,5	21,6	24,7	27,8	30,9	34,0	37,1	43,2	49,4	55,6	61,8
3,0	7,1	3,7	7,3	11,0	14,7	18,4	22,0	25,7	29,4	33,1	36,7	40,4	44,1	51,4	58,8	66,1	73,5
3,2	8,0	4,2	8,4	12,5	16,7	20,9	25,1	29,3	33,4	37,6	41,8	46,0	50,2	58,5	66,9	75,3	83,6
3 1/2	9,6	5,0	10,0	15,0	20,0	25,0	30,0	35,0	40,0	45,0	50,0	55,0	60,0	70,0	80,0	90,0	100,0
3,6	10,2	5,3	10,6	15,9	21,2	26,5	31,7	37,0	42,3	47,6	52,9	58,2	63,5	74,1	84,7	95,2	105,8
3,8	11,3	5,9	11,8	17,7	23,6	29,5	35,4	41,3	47,2	53,1	59,0	64,9	70,7	82,5	94,3	106,1	117,9
4,0	12,6	6,5	13,1	19,6	26,1	32,7	39,2	45,7	52,3	58,8	65,3	71,9	78,4	91,5	104,5	117,6	130,7
4,2	13,9	7,2	14,4	21,6	28,8	36,0	43,2	50,4	57,6	64,8	72,0	79,2	86,4	100,8	115,2	129,6	144,0
4 3/8	15,0	7,8	15,6	23,4	31,3	39,1	46,9	54,7	62,5	70,3	78,1	86,0	93,8	109,4	125,0	140,7	156,3
4 1/2	15,9	8,3	16,5	24,8	33,1	41,3	49,6	57,9	66,1	74,4	82,7	90,9	99,2	115,8	132,3	148,8	165,4
4,8	18,1	9,4	18,8	28,2	37,6	47,0	56,4	65,8	75,3	84,7	94,1	103,5	112,9	131,7	150,5	169,3	188,1
5,0	19,6	10,2	20,4	30,6	40,8	51,0	61,2	71,5	81,7	91,9	102,1	112,3	122,5	142,9	163,3	183,7	204,1
5 7/16	23,2	12,1	24,1	36,2	48,3	60,4	72,4	84,5	96,6	108,6	120,7	132,8	144,9	169,0	193,1	217,3	241,4
5 1/2	23,8	12,4	24,7	37,1	49,4	61,8	74,1	86,5	98,8	111,2	123,5	135,9	148,2	172,9	197,6	222,3	247,0
6,0	28,3	14,7	29,4	44,1	58,8	73,5	88,2	102,9	117,6	132,3	147,0	161,7	176,4	205,8	235,2	264,6	294,0
6 1/2	33,2	17,3	34,5	51,8	69,0	86,3	103,5	120,8	138,0	155,3	172,5	189,8	207,0	241,5	276,0	310,5	345,0
6,8	36,3	18,9	37,8	56,6	75,5	94,4	113,3	132,2	151,0	169,9	188,8	207,7	226,6	264,3	302,1	339,8	377,6
7,0	38,5	20,0	40,0	60,0	80,0	100,0	120,0	140,0	160,1	180,1	200,1	220,1	240,1	280,1	320,1	360,1	400,1
7 1/2	44,2	23,0	45,9	68,9	91,9	114,8	137,8	160,8	183,7	206,7	229,7	252,6	275,6	331,5	367,5	413,4	459,3
8,0	50,3	26,1	52,3	78,4	104,5	130,7	156,8	182,9	209,0	235,2	261,3	287,4	313,6	365,8	418,1	470,4	522,6
8 1/2	56,7	29,5	59,0	88,5	118,0	147,5	177,0	206,5	236,0	265,5	295,0	324,5	354,0	413,0	472,0	531,0	590,0
8,8	60,8	31,6	63,2	94,9	126,5	158,1	189,7	221,3	252,9	284,6	316,2	347,8	379,4	442,7	505,9	569,1	632,4
9 1/2	70,9	36,8	73,7	110,5	147,4	184,2	221,1	257,9	294,8	331,6	368,5	405,3	442,2	515,9	589,6	663,3	737,0
10 5/8	88,7	46,1	92,2	138,3	184,4	230,5	276,6	322,6	368,7	414,8	460,9	507,0	553,1	645,3	737,5	829,7	921,9
11,2	98,5	51,2	102,4	153,6	204,9	256,1	307,3	358,5	409,7	460,9	512,2	563,4	614,6	717,0	819,5	921,9	1024,3
12,0	113,1	58,8	117,6	176,4	235,2	294,0	352,8	411,6	470,4	529,1	587,9	646,7	705,5	823,1	940,7	1058,3	1175,9

Ram Ø • Area • Load • Pressure

lbs		1100	1650	2200	3300	4400	5500	6600	7700	8800	10000	11000	13200	15400	17600	19800	22000
Ø inch	in²	psi															
1,4	1,5	714,6	1071,9	1429,1	2143,7	2858,3	3572,9	4287,4	5002,0	5716,6	6496,1	7145,7	8574,9	10004,0	11433,2	12862,3	14291,5
1,6	2,0	547,1	820,6	1094,2	1641,3	2188,4	2735,5	3282,6	3829,7	4376,8	4973,6	5471,0	6565,1	7659,3	8753,5	9847,7	10941,9
1,8	2,5	432,3	648,4	864,5	1296,8	1729,1	2161,4	2593,6	3025,9	3458,2	3929,8	4322,7	5187,3	6051,8	6916,4	7780,9	8645,5
2,0	3,1	350,1	525,2	700,3	1050,4	1400,6	1750,7	2100,8	2451,0	2801,1	3183,1	3501,4	4201,7	4902,0	5602,3	6302,5	7002,8
2,2	3,8	289,4	434,1	578,7	868,1	1157,5	1446,9	1736,2	2025,6	2315,0	2630,7	2893,7	3472,5	4051,2	4630,0	5208,7	5787,5
2 1/2	4,9	224,1	336,1	448,2	672,3	896,4	1020,5	1344,5	1568,6	1792,7	2037,2	2240,9	2689,1	3137,3	3585,4	4033,6	4481,8
2,6	5,3	207,2	310,8	414,4	621,6	828,7	1035,9	1243,1	1450,3	1657,5	1883,5	2071,8	2486,2	2900,6	3314,9	3729,3	4143,7
2 3/4	5,9	185,2	277,8	370,4	555,6	740,8	926,0	1111,2	1296,4	1481,6	1683,6	1852,0	2222,4	2592,8	2963,2	3333,6	3704,0
3,0	7,1	155,6	233,4	311,2	466,9	622,5	778,1	933,7	1089,3	1244,9	1414,7	1556,2	1867,4	2178,7	2489,9	2801,1	3112,4
3,2	8,0	136,8	205,2	273,5	410,3	547,1	683,9	820,6	957,4	1094,2	1243,4	1367,7	1641,3	1914,8	2188,4	2461,9	2735,5
3 1/2	9,6	114,3	171,5	228,7	343,0	457,3	571,7	686,0	800,3	914,7	1039,4	1143,3	1372,0	1600,6	1829,3	2058,0	2286,6
3,6	10,2	108,1	162,1	216,1	324,2	432,3	540,3	648,4	756,5	864,5	982,4	1080,7	1296,8	1513,0	1729,1	1945,2	2161,4
3,8	11,3	97,0	145,5	194,0	291,0	388,0	485,0	582,0	678,9	775,9	881,7	969,9	1163,9	1357,9	1551,9	1745,9	1939,8
4,0	12,6	87,5	131,3	175,1	262,6	350,1	437,7	525,2	612,7	700,3	795,8	875,4	1050,4	1225,5	1400,6	1575,6	1750,7
4,2	13,9	79,4	119,1	158,8	238,2	317,6	397,0	476,4	555,8	635,2	721,8	794,0	952,8	1111,6	1270,4	1429,1	1587,9
4 3/8	15,0	73,2	109,8	146,3	219,5	292,7	365,9	439,0	512,2	585,4	665,2	731,7	878,1	1024,4	1170,8	1317,1	1463,4
4 1/2	15,9	69,2	103,7	138,3	207,5	276,7	345,8	415,0	484,1	553,3	628,8	691,6	830,0	968,3	1106,6	1244,9	1383,3
4,8	18,1	60,8	91,2	121,6	182,4	243,2	303,9	364,7	425,5	486,3	552,6	607,9	729,5	851,0	972,6	1094,2	1215,8
5,0	19,6	56,0	84,0	112,0	168,1	224,1	280,1	336,1	392,2	448,2	509,3	560,2	672,3	784,3	896,4	1008,4	1120,5
5 7/16	23,2	47,4	71,1	94,7	142,1	189,5	236,9	284,2	331,6	379,0	430,6	473,7	568,4	663,2	757,9	852,7	947,4
5 1/2	23,8	46,3	69,4	92,6	138,9	185,2	231,5	277,8	324,1	370,4	420,9	463,0	555,6	648,2	740,8	833,4	926,0
6,0	28,3	38,9	58,4	77,8	116,7	155,6	194,5	233,4	272,3	311,2	353,7	389,0	466,9	544,7	622,5	700,3	778,1
6 1/2	33,2	33,1	49,7	66,3	99,4	132,6	165,7	198,9	232,0	265,2	301,4	331,5	397,8	464,1	530,4	596,7	663,0
6,8	36,3	30,3	45,4	60,6	90,9	121,2	151,4	181,7	212,0	242,3	275,4	302,9	363,5	424,0	484,6	545,2	605,8
7,0	38,5	28,6	42,9	57,2	85,7	114,3	142,9	171,5	200,1	228,7	259,8	285,8	343,0	400,2	457,3	514,5	571,7
7 1/2	44,2	24,9	37,3	49,8	74,7	99,6	124,5	149,4	174,3	199,2	226,4	249,0	298,8	348,6	398,4	448,2	498,0
8,0	50,3	21,9	32,8	43,8	65,7	87,5	109,4	131,3	153,2	175,1	198,9	218,8	262,6	306,4	350,1	393,9	437,7
8 1/2	56,7	19,4	29,1	38,8	58,2	77,5	96,9	116,3	135,7	155,1	176,2	193,8	232,6	271,4	310,2	348,9	387,7
8,8	60,8	18,1	27,1	36,2	54,3	72,3	90,4	108,5	126,6	144,7	164,4	180,9	217,0	253,2	289,4	325,5	361,7
9 1/2	70,9	15,5	23,3	31,0	46,6	62,1	77,6	93,1	108,6	124,1	141,1	155,2	186,2	217,3	248,3	279,3	310,4
10 5/8	88,7	12,4	18,6	24,8	37,2	49,6	62,0	74,4	86,8	99,3	112,8	124,1	148,9	173,7	198,5	223,3	248,1
11,2	98,5	11,2	16,7	22,3	33,5	44,7	55,8	67,0	78,2	89,3	101,5	111,7	134,0	156,3	178,6	201,0	223,3
12,0	113,1	9,7	14,6	19,5	29,2	38,9	48,6	58,4	68,1	77,8	88,4	97,3	116,7	136,2	155,6	175,1	194,5